



**MOTOROLA**  
*intelligence everywhere™*




**ASTRO®** Digital Spectra® and  
Digital Spectra Plus  
W4, W5, W7, and W9 Mobile Radios  
User Guide



# ASTRO® Digital Spectra® and Digital Spectra Plus W4 Mobile Radio

## Quick Reference Card

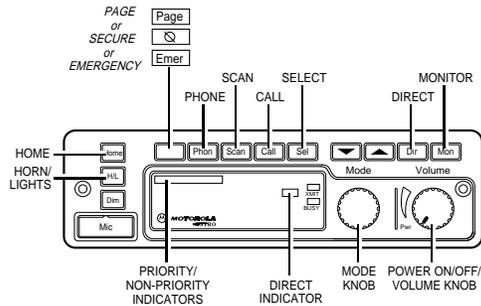

### BASIC OPERATION

#### Turn the Radio On and Off

Rotate the **Vol** (Volume) knob clockwise.

#### Set the Volume and Squelch

- 1 Turn the **Vol** knob clockwise to increase volume or counterclockwise to decrease volume as desired.
- 2 On conventional modes with Private-Line or Digital Private-Line, press **Mon** or remove the microphone from the hang-up clip to defeat the coded squelch.
- 3 Press **Mon** again, or replace the microphone on the hang-up clip to return to coded-squelch operation.
- 4 To adjust squelch level, hold **Mon** until a tone sounds.
- 5 Turn **Mode** knob to select squelch level.
- 6 Press **Home**.

#### Change Modes

Turn the **Mode** knob to select the desired mode

**OR**

Press **Home** to access the preprogrammed Home mode.

#### Transmit

- 1 Press and hold the microphone **PTT** button.
- 2 When the transmit light comes on solid and no alert tones sound (or a talk-permit tone or ID sidetone sounds), speak into the microphone in a normal voice.
- 3 State your FCC call sign at the beginning of each transmission.

### Transmit (Conventional Modes)

- 1 Press **Dir** (Direct). The **Dir** indicator lights.
- 2 Press **Dir** again to return to repeater operation.

#### Activate Scan

- 1 Press **Scan** to start a scan. If no activity exists, the display shows your selected mode. When a scanned channel or talkgroup becomes active, the display shows the active mode name. The **PRI** and **NPRI** indicators show priority.
- 2 Press **Scan** again to stop scanning.

#### Program a Scan List

- 1 Hold **Scan** until a tone sounds and the scan indicator blinks.
- 2 Turn the **Mode** knob to select the mode you want to program.
- 3 Press the **Sel** button as indicated in the table below to add or remove the displayed mode from the scan list.
- 4 Repeat the previous steps to continue editing the list.
- 5 Press **Home** or **Scan** to exit.

Press Sel	Mode	Indicator
One time	Non-Priority	<b>NPRI</b> lit
Two times	Second Priority	<b>PRI</b> lit
Three times	First Priority	<b>PRI</b> blinks
Four times	Delete from List	No indicator

#### Select Scan Mode Priority

- 1 Press the **Sel** button as indicated in the table above to designate up to two modes as priorities.
- 2 Press **Home** or **Scan** to end scan list selection.

## Send an Emergency Alarm or Call

Press the emergency actuator (**Emer** button, footswitch, hidden pushbutton) to begin an emergency transmission.

For conventional modes, a silent or non-silent emergency alarm data transmission is sent.

For trunked modes, emergency call (priority access to a voice channel), silent or non-silent emergency alarm, or emergency alarm and call is entered.

Depending on your radio's programming, one of the emergency sequences described in the table below occur.

Alarm Type	Indications/Actions
Non-Silent	A tone sounds and the display alternates between <b>EMERGENCY</b> and the zone/channel. When acknowledged, four more tones sound and the display shows <b>ACK RCVD</b> , then the radio returns to normal operation.
Silent	The audio is muted and no display changes take place during the alarm.  Press the <b>PTT</b> button, or press and hold the emergency switch to stop the emergency condition and unmute the radio.
Call (Trunked Modes only)	A tone sounds and the display alternates between <b>EMERGENCY</b> and the zone/channel.  Press the <b>PTT</b> button and talk.  After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

Alarm Type	Indications/Actions
Alarm and Call	After <b>ACK RCVD</b> (see Non-Silent Alarm above) is displayed, the radio has priority voice-channel access.  Press the <b>PTT</b> button and talk.  After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

## Send a Status Transmission

- 1 Press **Sts**. The last acknowledged status or first status name is displayed.
- 2 Rotate **Mode** to select other statuses.
- 3 Press **Sel** to send the transmission. The display flashes the selected status/message name until the dispatcher acknowledges, at which time alert tones sound and **ACK RCVD** is displayed. The radio then returns to normal operation.

## Send a Direct-Entry Keyboard Status Transmission

Press the appropriate **Sts #** button you wish to send. The associated indicator blinks until an acknowledgment is received, then it lights steadily.

## Send a Direct-Entry Enhanced Private Conversation Call

- 1 Press **Sel** or the **PTT** button. A single tone sounds and the display changes to **PLS WAIT**, followed by telephone-type ringing if the receiving unit is in service.

- 2 If the receiving unit answers, press the **PTT** button to identify yourself and proceed with your call.

**OR**

If the called unit does not respond, press **Sel** or the **PTT** button again to leave a Call Alert page message and your ID.

A single tone followed by four tones sounds if the called unit acknowledges the page.

## Initiate a Call Alert Page

- 1 Press the **Page** button.
- 2 Follow the instructions for initiating a Private Conversation to select a unit ID.
- 3 Press **Sel** or the **PTT** button to send a Call Alert page to the displayed ID,

**OR**

To send a Call Alert page following an Enhanced Private Conversation attempt, follow the instructions for sending a direct-entry Enhanced Private Conversation call.

## Answer a Call Alert Page

Four tones sound and **PAGE RCV** flashes on the display. The tone and display repeat every five seconds.

- 1 Press the **PTT** button,

**OR**

Initiate an Enhanced Private Conversation call to the caller.

## Select a Zone/Mode (Optional)

- 1 Press the Zone Up ▲ button or Zone Down ▼ button to scroll to the desired zone.
- 2 Turn the **Mode** knob to select the mode.

## Select a Home Zone/Home Mode

Press the **Home** button.

## Select Secure Mode

Press and release the **Q** button. The **Q** indicator lights up.

## Select an Encryption Key

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Turn the **Mode** knob to scroll to **KEY SEL.**
- 3 Press **Sel** to enter the Key Selection Menu.
- 4 Turn the **Mode** knob to select desired key.
- 5 Press **Sel** to select key.
- 6 Press **Home** or the **PTT** button to quit.

## Select a Key Index

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Turn the **Mode** knob to scroll to **INDX SEL.**
- 3 Press **Sel** to enter the Index Selection Menu.
- 4 Turn the **Mode** knob to select desired index.
- 5 Press **Sel** to select index.
- 6 Press **Home** or the **PTT** button to quit.

## Erase an Encryption Key

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Turn the **Mode** knob to scroll to **ERASE KY.**
- 3 Press **Sel** to enter the Key Erase Menu.
- 4 Turn the **Mode** knob to select desired index.
- 5 Press **Sel** to select index.
- 6 Press **Home** or the **PTT** button to quit.

## DISPLAY AND LIGHT INDICATORS

<i>Display/Light</i>	<i>Meaning</i>
<b>BUSY</b> light on	Displayed conventional mode has activity on it, or selected trunked system is currently busy. Wait for callback.
<b>XMIT</b> light on	Indicates you are transmitting.
<b>Dir</b> indicator lit	Radio is in direct (mobile-to-mobile) operation.
<b>PRI, NPRI</b> indicators lit	Mode displayed is in scan list with the indicated priority level.
<b>P</b> displayed	Telephone dialing pause. Press <b>Sel</b> to continue the dialing.
<b>NO ACK</b> displayed	Unit being called with the Enhanced Private Conversation or Call Alert Page feature is not in service, or emergency alarm or status/message transmission is not acknowledged by dispatcher.
<b>NO ANSWR</b> displayed	Unit being called with Enhanced Private Conversation or Call Alert Page does not respond, but is operational.
<b>EMERGENCY</b> displayed	Radio is in emergency alarm or call state.
<b>NO EMERG</b> displayed	A mode incapable of emergency transmission has been selected.
<b>OUT RNG</b> displayed	Radio is out of range of the trunking system.

## ALERT TONES

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
1 Low-Pitched Tone	Invalid Key Alert	Feature button pressed is not valid in selected mode, or a Call Alert or emergency alarm was not acknowledged.
1 High-Pitched Tone	Central Acknowledge or Valid Key	Central controller has received request for Call Alert or emergency alarm transmission. You pressed a valid key.
4 High-Pitched Tones	Dispatcher or Mobile Unit Acknowledge	Dispatcher is acknowledging your emergency transmission. Mobile unit has received your Call Alert.
5 High-Pitched Tones		The above two acknowledge tones, heard in tandem.
2 High-Pitched Tones	Private Conversation	You have an incoming call. Press <b>Call</b> , then the PTT button, then talk.
4 High-Pitched Tones every 6 seconds	Call Alert Page	Call Alert page has been received.
Phone-Type Busy Tone (when pressing the PTT button)	System Busy	All system radio channels in use. Release the <b>PTT</b> button, and wait for callback.


## ALERT TONES (Continued)

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
3 Short High-Tones (after requesting a busy channel) upon pressing the PTT button)	Automatic Call Back or Talk Permit	Channel is available for previously requested transmission. System is accepting your transmission.
Low-Pitched Tone (upon pressing the PTT button during Transmit) (Operation Error)	Talk Prohibit/ Out-of-Range or Time-Out Timer or Illegal Mode	Out of trunked radio system range or system is out of service. Present transmission will soon be disabled. You have entered a mode where normal system traffic will be missed, or you attempted something that is not allowed. (See examples below.)
High-Pitched Tone every 10 seconds in unmuted receive condition	Failsoft	System central controller failure. The radio reverts from trunked operation to operation similar to a conventional repeater. Others may share the channel.

**Examples:** Not exiting phone mode after a call (radio cannot receive fleet or subfleet calls), transmitting in receive-only conventional mode, trying to select a dynamic mode when no dynamic ID assignment has been made.

# ASTRO® Digital Spectra® and Digital Spectra Plus W5 Mobile Radio

## Quick Reference Card

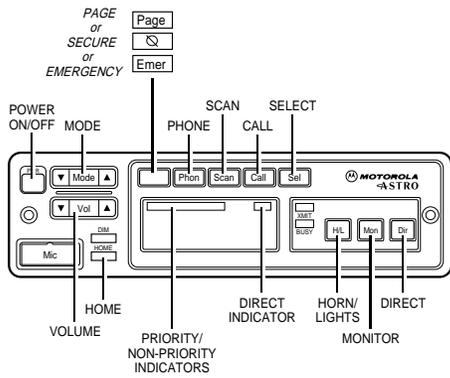

### BASIC OPERATION

#### Turn the Radio On and Off

Press the **PWR** button once.

#### Set the Volume and Squelch

- 1 Hold the **Vol** rocker switch down to increase or decrease volume as desired, then release. The display shows volume levels from **0** to **15**.
- 2 On conventional modes with Private-Line or Digital Private-Line, press **Mon** or remove the microphone from the hang-up clip to defeat the coded squelch.
- 3 Press **Mon** again, or replace the microphone on the hang-up clip to return to coded-squelch operation.
- 4 To adjust squelch level, hold **Mon** until a tone sounds.
- 5 Press the **Mode** rocker switch to select squelch level.
- 6 Press **HOME**.

#### Change Modes

Press the **Mode** rocker switch to select the desired mode

OR

Press **HOME** to access the preprogrammed Home mode.

#### Transmit

- 1 Press and hold the microphone **PTT** button.
- 2 When the transmit light comes on solid and no alert tones sound (or a talk-permit tone or ID sidetone sounds), speak into the microphone in a normal voice.
- 3 State your FCC call sign at the beginning of each transmission.

### Transmit (Conventional Modes)

- 1 Press **Dir** (Direct). The **Dir** indicator lights.
- 2 Press **Dir** again to return to repeater operation.

### Activate Scan

- 1 Press **Scan** to start a scan. If no activity exists, the display shows your selected mode. When a scanned channel or talkgroup becomes active, the display shows the active mode name. The **PRI** and **NPRI** indicators show priority.
- 2 Press **Scan** again to stop scanning.

### Program a Scan List

- 1 Hold **Scan** until a tone sounds and the scan indicator blinks.
- 2 Press the **Mode** rocker switch to select the mode you want to program.
- 3 Press the **Sel** button as indicated in the table below to add or remove the displayed mode from the scan list.
- 4 Repeat the previous steps to continue editing the list.
- 5 Press **HOME** or **Scan** to exit.

Press Sel	Mode	Indicator
One time	Non-Priority	<b>NPRI</b> lit
Two times	Second Priority	<b>PRI</b> lit
Three times	First Priority	<b>PRI</b> blinks
Four times	Delete from List	No indicator

### Select Scan Mode Priority

- 1 Press the **Sel** button as indicated in the table above to designate up to two modes as priorities.
- 2 Press **HOME** or **Scan** to end scan list selection.

## Send an Emergency Alarm or Call

Press the emergency actuator (**Emer** button, footswitch, hidden pushbutton) to begin an emergency transmission.

For conventional modes, a silent or non-silent emergency alarm data transmission is sent.

For trunked modes, emergency call (priority access to a voice channel), silent or non-silent emergency alarm, or emergency alarm and call is entered.

Depending on your radio's programming, one of the emergency sequences described in the table below occur.

Alarm Type	Indications/Actions
Non-Silent	A tone sounds and the display flashes <b>EMERGENCY</b> . When acknowledged, four more tones sound and the display shows <b>ACK RCVD</b> , then the radio returns to normal operation.
Silent	The audio is muted and no display changes take place during the alarm.  Press the <b>PTT</b> button, or press and hold the emergency switch to stop the emergency condition and unmute the radio.
Call (Trunked Modes only)	A tone sounds and the display flashes <b>EMERGENCY</b> .  Press the <b>PTT</b> button and talk.  After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

Alarm Type	Indications/Actions
Alarm and Call	After <b>ACK RCVD</b> (see Non-Silent Alarm above) is displayed, the radio has priority voice-channel access.  Press the <b>PTT</b> button and talk.  After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

## Send a Status Transmission

- 1 Press **Sts**. The last acknowledged status or first status name is displayed.
- 2 Press the **Mode** rocker switch to select other statuses.
- 3 Press **Sel** to send the transmission. The display flashes the selected status name until the dispatcher acknowledges, at which time alert tones sound and **ACK RCVD** is displayed. The radio then returns to normal operation.

## Send a Direct-Entry Keyboard Status Transmission

Press the appropriate **Sts #** button that you wish to send. The associated indicator blinks until an acknowledgment is received, then it lights steadily.

## Send a Direct-Entry Enhanced Private Conversation Call

- 1 Press **Sel** or the **PTT** button. A single tone sounds and the display changes to **PLS WAIT**, followed by telephone-type ringing if the receiving unit is in service.

- 2 If the receiving unit answers, press the **PTT** button to identify yourself and proceed with your call.

**OR**

If the called unit does not respond, press **Sel** or the **PTT** button again to leave a Call Alert page message and your ID.

A single tone followed by four tones sounds if the called unit acknowledges the page.

## Initiate a Call Alert Page

- 1 Press the **Page** button.
- 2 Follow the instructions for initiating a Private Conversation to select a unit ID.
- 3 Press **Sel** or the **PTT** button to send a Call Alert page to the displayed ID,

**OR**

To send a Call Alert page following an Enhanced Private Conversation attempt, follow the instructions for sending a direct-entry Enhanced Private Conversation call.

## Answer a Call Alert Page

Four tones sound and **PAGE RCV** flashes on the display. The tone and display repeat every five seconds.

- 1 Press the **PTT** button,

**OR**

Initiate an Enhanced Private Conversation call to the caller.

## Select a Zone/Mode (Optional)

- 1 Press the Zone Up ▲ button or Zone Down ▼ button to scroll to the desired zone.
- 2 Press the **Mode** rocker switch to select the mode.

## Select a Home Zone/Home Mode

Press the **HOME** button.

## Select Secure Mode

Press and release the **Q** button. The **Q** indicator lights up.

## Select an Encryption Key

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **KEY SEL**.
- 3 Press **Sel** to enter the Key Selection Menu.
- 4 Press the **Mode** rocker switch to select the desired key.
- 5 Press **Sel** to select the key.
- 6 Press **HOME** or the **PTT** button to quit.

## Select a Key Index

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **INDEX SEL**.
- 3 Press **Sel** to enter the Index Selection Menu.
- 4 Press the **Mode** rocker switch to select the desired index.
- 5 Press **Sel** to select the index.
- 6 Press **HOME** or the **PTT** button to quit.

## Erase an Encryption Key

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **ERASE KY**.
- 3 Press **Sel** to enter the Key Erase Menu.
- 4 Press the **Mode** rocker switch to select the desired index.
- 5 Press **Sel** to select the index.
- 6 Press **HOME** or the **PTT** button to quit.

## DISPLAY AND LIGHT INDICATORS

<i>Display/Light</i>	<i>Meaning</i>
<b>BUSY</b> light on	Displayed conventional mode has activity on it, or selected trunked system is currently busy. Wait for callback.
<b>XMIT</b> light on	Indicates you are transmitting.
<b>Dir</b> indicator lit	Radio is in direct (mobile-to-mobile) operation.
<b>PRI, NPRI</b> indicators lit	Mode displayed is in scan list with the indicated priority level.
<b>P</b> displayed	Telephone dialing pause. Press <b>Sel</b> to continue the dialing.
<b>NO ACK</b> displayed	Unit being called with the Enhanced Private Conversation or Call Alert Page feature is not in service, or emergency alarm or status/message transmission is not acknowledged by dispatcher.
<b>NO ANSWR</b> displayed	Unit being called with Enhanced Private Conversation or Call Alert Page does not respond, but is operational.
<b>EMERGENCY</b> displayed	Radio is in emergency alarm or call state.
<b>NO EMERG</b> displayed	A mode incapable of emergency transmission has been selected.
<b>OUT RNG</b> displayed	Radio is out of range of the trunking system.

## ALERT TONES

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
1 Low-Pitched Tone	Invalid Key Alert	Feature button pressed is not valid in selected mode, or a Call Alert or emergency alarm was not acknowledged.
1 High-Pitched Tone	Central Acknowledge or Valid Key	Central controller has received request for Call Alert or emergency alarm transmission. You pressed a valid key.
4 High-Pitched Tones	Dispatcher or Mobile Unit Acknowledge	Dispatcher is acknowledging your emergency transmission. Mobile unit has received your Call Alert.
5 High-Pitched Tones		The above two acknowledge tones, heard in tandem.
2 High-Pitched Tones	Private Conversation	You have an incoming call. Press <b>Call</b> , then the <b>PTT</b> button, then talk.
4 High-Pitched Tones every 6 seconds	Call Alert Page	Call Alert page has been received.
Phone-Type Busy Tone (when pressing the <b>PTT</b> button)	System Busy	All system radio channels in use. Release the <b>PTT</b> button, and wait for callback.


## ALERT TONES (Continued)

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
3 Short High-Tones (after requesting a busy channel) upon pressing the <b>PTT</b> button)	Automatic Call Back or Talk Permit	Channel is available for previously requested transmission. System is accepting your transmission.
Low-Pitched Tone (upon pressing the <b>PTT</b> button during Transmit) (Operation Error)	Talk Prohibit/ Out-of-Range or Time-Out Timer or Illegal Mode	Out of trunked radio system range or system is out of service. Present transmission will soon be disabled. You have entered a mode where normal system traffic will be missed, or you attempted something that is not allowed. (See examples below.)
High-Pitched Tone every 10 seconds in unmuted receive condition	Failsoft	System central controller failure. The radio reverts from trunked operation to operation similar to a conventional repeater. Others may share the channel.

**Examples:** Not exiting phone mode after a call (radio cannot receive fleet or subfleet calls), transmitting in receive-only conventional mode, trying to select a dynamic mode when no dynamic ID assignment has been made.

# ASTRO® Digital Spectra® and Digital Spectra Plus W7 Mobile Radio

## Quick Reference Card

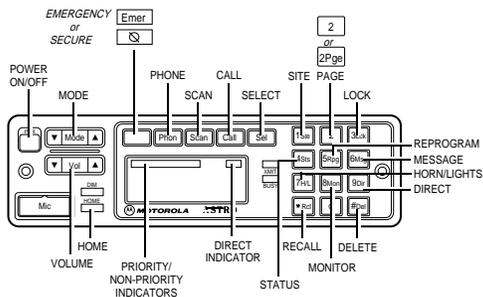

### BASIC OPERATION

#### Turn the Radio On and Off

Press the **PWR** button once.

#### Set the Volume and Squelch

- 1 Hold the **Vol** rocker switch down to increase or decrease volume as desired, then release. The display shows volume levels from **0** to **15**.
- 2 On conventional modes with Private-Line or Digital Private-Line, press **Mon** or remove the microphone from the hang-up clip to defeat the coded squelch.
- 3 Press **Mon** again, or replace the microphone on the hang-up clip to return to coded-squelch operation.
- 4 To adjust squelch level, hold **Mon** until a tone sounds.
- 5 Press the **Mode** rocker switch to select squelch level.
- 6 Press **HOME**.

#### Change Modes

Press the **Mode** rocker switch to select the desired mode

OR

Press **HOME** to access the preprogrammed Home mode.

#### Transmit

- 1 Press and hold the microphone **PTT** button.
- 2 When the transmit light comes on solid and no alert tones sound (or a talk-permit tone or ID sidetone sounds), speak into the microphone in a normal voice.
- 3 State your FCC call sign at the beginning of each transmission.

### Transmit (Conventional Modes)

- 1 Press **Dir** (Direct). The **Dir** indicator lights.
- 2 Press **Dir** again to return to repeater operation.

#### Activate Scan

- 1 Press **Scan** to start a scan. If no activity exists, the display shows your selected mode. When a scanned channel or talkgroup becomes active, the display shows the active mode name. The **PRI** and **NPRI** indicators show priority.
- 2 Press **Scan** again to stop scanning.

#### Program a Scan List

- 1 Hold **Scan** until a tone sounds and the scan indicator blinks.
- 2 Press the **Mode** rocker switch to select the mode you want to program.

OR

Press the **Rcl** button to scroll through the modes currently in the scan list.

- 3 Press the **Sel** button as indicated in the table below to add or remove the displayed mode from the scan list.
- 4 Repeat the previous steps to continue editing the list.
- 5 Press **HOME** or **Scan** to exit.

Press Sel	Mode	Indicator
One time	Non-Priority	<b>NPRI</b> lit
Two times	Second Priority	<b>PRI</b> lit
Three times	First Priority	<b>PRI</b> blinks
Four times	Delete from List	No indicator

## Select Scan Mode Priority

- 1 Press the **Sel** button as indicated in the table above to designate up to two modes as priorities.
- 2 Press **HOME** or **Scan** to end scan list selection.

## Send an Emergency Alarm or Call

Press the emergency actuator (**Emer** button, footswitch, hidden pushbutton) to begin an emergency transmission.

For conventional modes, a silent or non-silent emergency alarm data transmission is sent.

For trunked modes, emergency call (priority access to a voice channel), silent or non-silent emergency alarm, or emergency alarm and call is entered.

Depending on your radio's programming, one of the emergency sequences described in the table below occur.

Alarm Type	Indications/Actions
Non-Silent	A tone sounds and the display flashes <b>EMERGENCY</b> . When acknowledged, four more tones sound and the display shows <b>ACK RCVD</b> , then the radio returns to normal operation.
Silent	The audio is muted and no display changes take place during the alarm.  Press the <b>PTT</b> button, or press and hold the emergency switch to stop the emergency condition and unmute the radio.

Alarm Type	Indications/Actions
Call (Trunked Modes only)	A tone sounds and the display flashes <b>EMERGENCY</b> .  Press the <b>PTT</b> button and talk.  After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.
Alarm and Call	After <b>ACK RCVD</b> (see Non-Silent Alarm above) is displayed, the radio has priority voice-channel access.  Press the <b>PTT</b> button and talk.  After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

## Send a Status Transmission

- 1 Press **Sts**. The last acknowledged status or first status name is displayed.
- 2 Press the **Mode** rocker switch to select other statuses.
- 3 Press **Sel** to send the transmission. The display flashes the selected status name until the dispatcher acknowledges, at which time alert tones sound and **ACK RCVD** is displayed. The radio then returns to normal operation.

## Send a Direct-Entry Keyboard Status Transmission

Press the appropriate **Sts #** button that you wish to send. The associated indicator blinks until an acknowledgment is received, then it lights steadily.

## Send a Direct-Entry Enhanced Private Conversation Call

- 1 Press **Sel** or the **PTT** button. A single tone sounds and the display changes to **PLS WAIT**, followed by telephone-type ringing if the receiving unit is in service.
- 2 If the receiving unit answers, press the **PTT** button to identify yourself and proceed with your call.

### OR

If the called unit does not respond, press **Sel** or the **PTT** button again to leave a Call Alert page message and your ID.

A single tone followed by four tones sounds if the called unit acknowledges the page.

## Initiate a Call Alert Page

- 1 Press the **Page** button.
- 2 Follow the instructions for initiating a Private Conversation to select a unit ID.
- 3 Press **Sel** or the **PTT** button to send a Call Alert page to the displayed ID.

### OR

To send a Call Alert page following an Enhanced Private Conversation attempt, follow the instructions for sending a direct-entry Enhanced Private Conversation call.

## Answer a Call Alert Page

Four tones sound and **PAGE** **RCU** flashes on the display. The tone and display repeat every five seconds.

- 1 Press the **PTT** button,

**OR**

Initiate an Enhanced Private Conversation call to the caller.

---

## Select a Zone/Mode (Optional)

- 1 Press the Zone Up ▲ button or Zone Down ▼ button to scroll to the desired zone.
  - 2 Press the **Mode** rocker switch to select the mode.
- 

## Select a Home Zone/Home Mode

Press the **HOME** button.

---

## Request Dynamic Regrouping

Press **Rpg**. A central acknowledgement tone sounds and **RPGM** **RQST** is displayed while the request is being processed.

When the dispatcher acknowledges, four additional tones sound, **ACK** **RCUD** is displayed, and your radio returns to normal operation.

---

## Automatic Multiple Site Selection (AMSS)

### View the Current Site

Press **Ste** momentarily. If the radio is scanning for a new site, **SCANNING** is displayed.

---

### Initiate a Site Scan

Press and hold **Ste** until a tone sounds and **SCANNING** is displayed.

---

### Lock on a Site

- 1 Press **Lck** to lock the radio onto the current site.
- 2 To view its condition (locked or unlocked), press **Lck** momentarily. **LOCKED** or **UNLOCKED** is displayed.

**OR**

To toggle to the opposite condition, press and hold **Lck** until a beep sounds and the display changes to the other condition. The radio then returns to normal operation.

---

## Select Secure Mode

Press and release the  button. The  indicator lights up.

---

## Select an Encryption Key

- 1 Press and hold the  button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **KEY SEL**.
- 3 Press **Sel** to enter the Key Selection Menu.
- 4 Press the **Mode** rocker switch to select the desired key.

- 5 Press **Sel** to select the key.

- 6 Press **HOME** or the **PTT** button to quit.
- 

## Select a Key Index

- 1 Press and hold the  button until a tone sounds.
  - 2 Press the **Mode** rocker switch to scroll to **INDX SEL**.
  - 3 Press **Sel** to enter the Index Selection Menu.
  - 4 Press the **Mode** rocker switch to select the desired index.
  - 5 Press **Sel** to select the index.
  - 6 Press **HOME** or the **PTT** button to quit.
- 

## Erase an Encryption Key

- 1 Press and hold the  button until a tone sounds.
  - 2 Press the **Mode** rocker switch to scroll to **ERASE KY**.
  - 3 Press **Sel** to enter the Key Erase Menu.
  - 4 Press the **Mode** rocker switch to select the desired index.
  - 5 Press **Sel** to select the index.
  - 6 Press **HOME** or the **PTT** button to quit.
-

## DISPLAY AND LIGHT INDICATORS

<i>Display/Light</i>	<i>Meaning</i>
<b>BUSY</b> light on	Displayed conventional mode has activity on it, or selected trunked system is currently busy. Wait for callback.
<b>XMIT</b> light on	Indicates you are transmitting.
<b>Dir</b> indicator lit	Radio is in direct (mobile-to-mobile) operation.
<b>PRI, NPRI</b> indicators lit	Mode displayed is in scan list with the indicated priority level.
<b>P</b> displayed	Telephone dialing pause. Press <b>Sel</b> to continue the dialing.
<b>NO ACK</b> displayed	Unit being called with the Enhanced Private Conversation or Call Alert Page feature is not in service, or emergency alarm or status/message transmission is not acknowledged by dispatcher.
<b>NO ANSWR</b> displayed	Unit being called with Enhanced Private Conversation or Call Alert Page does not respond, but is operational.
<b>EMERGENCY</b> displayed	Radio is in emergency alarm or call state.
<b>NO EMERG</b> displayed	A mode incapable of emergency transmission has been selected.
<b>OUT RNG</b> displayed	Radio is out of range of the trunking system.

## ALERT TONES

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
1 Low-Pitched Tone	Invalid Key Alert	Feature button pressed is not valid in selected mode, or a Call Alert or emergency alarm was not acknowledged.
1 High-Pitched Tone	Central Acknowledge or Valid Key	Central controller has received request for Call Alert or emergency alarm transmission. You pressed a valid key.
4 High-Pitched Tones	Dispatcher or Mobile Unit Acknowledge	Dispatcher is acknowledging your emergency transmission. Mobile unit has received your Call Alert.
5 High-Pitched Tones		The above two acknowledge tones, heard in tandem.
2 High-Pitched Tones	Private Conversation	You have an incoming call. Press <b>Call</b> , then the <b>PTT</b> button, then talk.
4 High-Pitched Tones every 6 seconds	Call Alert Page	Call Alert page has been received.
3 Short High-Tones (after requesting a busy channel) (upon pressing the <b>PTT</b> button)	Automatic Call Back or Talk Permit	Channel is available for previously requested transmission. System is accepting your transmission.


## ALERT TONES (Continued)

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
Low-Pitched Tone (upon pressing the <b>PTT</b> button during Transmit) (Operation Error)	Talk Prohibit/ Out-of-Range, or Time-Out Timer, or Illegal Mode	Out of trunked radio system range or system is out of service. Present transmission will soon be disabled. You have entered a mode where normal system traffic will be missed, or you attempted something that is not allowed. (See examples below.)
High-Pitched Tone every 10 seconds in unmuted receive condition	Failsoft	System central controller failure. The radio reverts from trunked operation to operation similar to a conventional repeater. Others may share the channel.

**Examples:** Not exiting phone mode after a call (radio cannot receive fleet or subfleet calls), transmitting in receive-only conventional mode, trying to select a dynamic mode when no dynamic ID assignment has been made.

# ASTRO® Digital Spectra® and Digital Spectra Plus W9 Mobile Radio

## Quick Reference Card

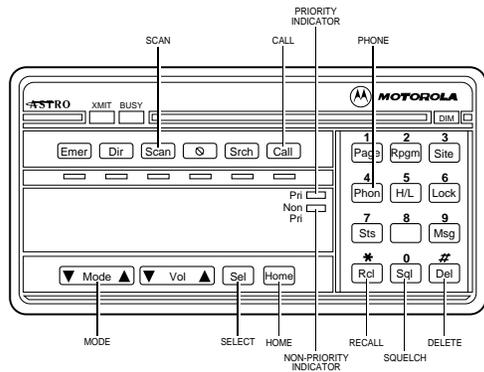

## BASIC OPERATION

### Turn the Radio On and Off

Slide the power switch on the bottom of the control unit to the left.

### Set the Volume and Squelch

- 1 Hold the **Vol** rocker switch down to increase or decrease volume as desired, then release. The display shows volume levels from **0** to **15**.
- 2 On conventional modes with Private-Line or Digital Private-Line, press **Sql** or remove the microphone from the hang-up clip to defeat the coded squelch.
- 3 Press **Sql** again to return to coded-squelch operation.
- 4 To adjust squelch level, hold **Sql** until a tone sounds.
- 5 Press the **Mode** rocker switch to select squelch level.
- 6 Press **Home**.

### Change Modes

Press the **Mode** rocker switch to scroll to the desired mode

OR

Press **Home** to access the preprogrammed Home mode.

### Transmit

- 1 Press and hold the microphone **PTT** button.
- 2 When the transmit light comes on solid and no alert tones sound (or a talk-permit tone or ID sidetone sounds), speak into the microphone in a normal voice.
- 3 State your FCC call sign at the beginning of each transmission.

## Transmit (Conventional Modes)

- 1 Press **Dir** (Direct). The **Dir** indicator lights.
- 2 Press **Dir** again to return to repeater operation.

## TELEPHONE OPERATION

### Make a Phone Call

Press **Phon** to select the phone function. The display shows the last phone number dialed or a series of dashes.

### Dial the Displayed Number

- 1 Press **Sel** or the **PTT** button, and wait for dial tone.
- 2 Press **Sel** or the **PTT** button again to dial the displayed number.

### Dial a Number from the Pre-Stored List

- 1 Press the **Mode** rocker switch to scroll to the number or name you want to call.
- 2 Press **Sel** or the **PTT** button, and wait for dial tone.
- 3 Press **Sel** or the **PTT** button again to dial the displayed number.

### Dial or Direct Dial a New Number

- 1 Using the keypad, enter the telephone number.
- 2 Press **Sel** or the **PTT** button, and wait for dial tone.
- 3 Press **Sel** or the **PTT** button again to dial the displayed number.

## Answer a Phone Call in Trunked Modes

When a call is received, ringing tones are heard from the speaker, and **PHONE** is displayed.

- 1 Press **PHON** and begin your conversation.
- 2 Press **Home** to hang up.

## Make a Call (Trunked Modes Only)

A tone sounds and the display alternates between **EMERGENCY** and the zone/channel.

- 1 Press the **PTT** button and talk.
- 2 After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

## Alarm and Call

After **ACK RCVD** is displayed, your radio has priority voice-channel access.

- 1 Press the **PTT** button and talk.
- 2 After completing the call, press and hold the emergency actuator until a tone sounds to return to normal operation.

## Send a Status Transmission

- 1 Press **Sts**. The last acknowledged status or first status name is displayed.
- 2 Press the **Mode** rocker switch or use the keypad to select other statuses.

- 3 Press **Se1** or the **PTT** button to send the transmission. The display flashes the **PLEASE WAIT** until the dispatcher acknowledges, at which time alert tones sound and **ACK RCVD** is displayed. The radio then returns to normal operation.

## Send a Direct-Entry Keyboard Status Transmission

Press the appropriate **Sts #** button that you wish to send. The associated indicator blinks until an acknowledgment is received, then it lights steadily.

### Initiate an Enhanced Private Conversation Call

- 1 Press **Se1** or the **PTT** button. A single tone sounds and the display changes to **PLEASE WAIT**, followed by telephone-type ringing if the receiving unit is in service.
- 2 If the receiving unit answers, press the **PTT** button to identify yourself and proceed with your call.

### OR

If the called unit does not respond, press **Se1** or the **PTT** button again to leave a Call Alert page message and your ID. A single tone followed by four tones sounds if the called unit acknowledges the page.

### Initiate a Private Conversation II

- 1 Press the **PTT** button to initiate a Private Conversation I or II call.
- 2 Pause for a second, then begin the conversation.
- 3 Press **Home** or **Call** to hang up.

## Initiate a Call Alert Page

- 1 Press the **Page** button.
- 2 Follow the instructions for initiating an Enhanced Private Conversation to select a unit ID.
- 3 Press **Se1** or the **PTT** button to send a Call Alert page to the displayed ID,

### OR

To send a Call Alert page following an Enhanced Private Conversation attempt, follow the instructions for sending an Enhanced Private Conversation call.

## Answer a Call Alert Page

Four tones sound and **PAGE RCVD** flashes on the display.

- 1 Press either the microphone **PTT** button or the **Call** button to clear the Call Alert state.

## Answer a Private Conversation Call

Two tones sound and **CALL RCVD** flashes on the display.

- 1 Press the **Call** button.
- 2 Press the microphone **PTT** button, and speak into the microphone.
- 3 Press **Home** or **Call** to hang up.

## Request Dynamic Regrouping

Press **Rpgm**. A central acknowledgement tone sounds and **RPGM RQST** is displayed while the request is being processed.  
When the dispatcher acknowledges, four additional tones sound, **ACK RCVD** is displayed, and your radio returns to normal operation.

## Automatic Multiple Site Selection (AMSS)

### View the Current Site

Press **Site** momentarily. If the radio is scanning for a new site, **SCANNING** is displayed.

### Initiate a Site Scan

Press and hold **Site** until a tone sounds and **SCANNING** is displayed.

### Lock on a Site

- 1 Press **Lock** to lock the radio onto the current site.
- 2 To view its condition (locked or unlocked), press **Lock** momentarily. **SITE LOCKED** or **SITE UNLCKD** is displayed.

### OR

To toggle to the opposite condition, press and hold **Lock** until a tone sounds and the display changes to the other condition.  
The radio then returns to normal operation.

## Select Secure Mode

Press and release the **Q** button. The **Q** indicator lights up.

## Select an Encryption Key

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **KEY SEL**.
- 3 Press **Sel** to enter the Key Selection Menu.
- 4 Press the **Mode** rocker switch to select the desired key.
- 5 Press **Sel** to select the key.
- 6 Press **HOME** or the **PTT** button to quit.

## Select a Key Index

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **INDX SEL**.
- 3 Press **Sel** to enter the Index Selection Menu.
- 4 Press the **Mode** rocker switch to select the desired index.
- 5 Press **Sel** to select the index.
- 6 Press **HOME** or the **PTT** button to quit.

## Erase an Encryption Key (Single-Key Option Only)

- 1 Press and hold the **Q** button until a tone sounds. The display changes to **ERASE KY**.
- 2 Press **Sel** to erase the key.
- 3 Press **HOME** or the **PTT** button to quit.

## Erase an Encryption Key

- 1 Press and hold the **Q** button until a tone sounds.
- 2 Press the **Mode** rocker switch to scroll to **ERASE KY**.
- 3 Press **Sel** to enter the Key Erase Menu.
- 4 Press the **Mode** rocker switch to select the desired index.
- 5 Press **Sel** to select the index.
- 6 Press **HOME** or the **PTT** button to quit.

## DISPLAY AND LIGHT INDICATORS

<i>Message</i>	<i>Meaning</i>
<b>BUSY</b> light on	Displayed conventional mode has activity on it, or selected trunked system is currently busy. Wait for callback.
<b>XMIT</b> light on	Indicates you are transmitting.
<b>Pri</b> indicator blinks	Mode displayed is first priority.
<b>Pri</b> indicator lit	Mode displayed is second priority.
Non <b>Pri</b> lit	Mode displayed is non-priority.
<b>P</b> displayed	Telephone dialing pause. Press <b>SEL</b> to continue the dialing.
<b>NO ACK</b> displayed	Unit being called with the Enhanced Private Conversation or Call Alert Page feature is not in service, or emergency alarm or status/message transmission is not acknowledged by dispatcher.
<b>LIST FULL</b> displayed	Scan list full. Delete a mode before adding another.
<b>PHON BSY</b> displayed	Trunked phone interconnect is busy.
<b>NO ANSWER</b> displayed	Unit being called with Enhanced Private Conversation or Call Alert Page does not respond, but is operational.
<b>EMERGENCY</b> displayed	Radio is in emergency alarm or call state.
<b>NO EMERGENCY</b> displayed	A mode incapable of emergency transmission has been selected.
<b>OUT OF RANGE</b> displayed	Radio is out of range of the trunking system.

## ALERT TONES

<i>Type of Tone</i>	<i>Name</i>	<i>Explanation</i>
1 Low-Pitched Tone	Invalid Key Alert	Feature button pressed is not valid in selected mode, or a Call emergency alarm was not acknowledged.
1 High-Pitched Tone	Central Acknowledge or Valid Key	Central controller has received request for Call Alert, emergency alarm, reprogram request, or status/message transmission. You pressed a valid key.
4 High-Pitched Tones	Dispatcher or Mobile Unit Acknowledge	Dispatcher is acknowledging your emergency transmission. Mobile unit has received your Call Alert.
5 High-Pitched Tones		The above two acknowledge tones, heard in tandem.
2 High-Pitched Tones	Private Conversation	You have an incoming call. Press <b>CALL</b> , then the <b>PTT</b> button and talk.
4 High-Pitched Tones every 6 seconds	Call Alert Page	Call Alert page has been received.
Phone-Type Busy Tone (when pressing the <b>PTT</b> button)	System Busy	All system radio channels in use. Release the <b>PTT</b> button, and wait for callback.



**MOTOROLA**  
*intelligence everywhere™*

**ASTRO®**  
**Digital Spectra®**  
**and**  
**Digital Spectra Plus**  
**W4, W5, W7, and W9**  
**Mobile Radios**

**User Guide**

---

This declaration is applicable to your radio *only* if your radio is labeled with the FCC logo shown below.

## DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party  
Name: Motorola, Inc.

Address: 8000 West Sunrise Boulevard  
Plantation, FL 33322 USA  
Phone Number: 1-888-567-7347

Hereby declares that the product:

Model Name: **ASTRO Digital Spectra and Digital Spectra Plus**

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

### **Class B Digital Device**

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

---

## Foreword

This manual describes how to operate an ASTRO® Digital Spectra® and Digital Spectra Plus W4, W5, W7, and W9 Mobile Radios.

The manual first introduces you to your new radio. Then it covers basic radio operation and commonly used (general) radio features. Next, special radio features (conventional, trunking, and secure) available on an ASTRO Digital Spectra and Digital Spectra Plus radio are described. Finally, the back section of this manual includes field-programming information, a glossary, and an index.

## Product Safety and RF Exposure Compliance



Caution

**Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.**

### ATTENTION!

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6881095C99) to ensure compliance with RF energy exposure limits.**



Caution

**Do not jump-start a vehicle with the radio power or ignition cables connected. Damage to the radio and/or accessories might occur.**

## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in

---

any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

## **Document Copyrights**

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

## **Disclaimer**

The information in this document is carefully examined, and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights nor the rights of others.

## **Trademarks**

MOTOROLA, the Stylized M logo, ASTRO, and Spectra are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

---

## Notations Used in This Manual

Throughout the text in this publication, you will notice the use of WARNINGS, CAUTIONS, and Notes. These notations are used to emphasize that safety hazards exist, and care that must be taken or observed.

 WARNING	<b>WARNING:</b> An operational procedure, practice, or other condition, which might result in injury or death if not carefully observed.
--	--

 Caution	<b>CAUTION:</b> An operational procedure, practice, or other condition, which might result in damage to the equipment if not carefully observed.
--	--

**Note:** **Note:** An operational procedure, practice, or other condition, which is essential to emphasize.

The following special notations identify certain items:

<i>Example</i>	<i>Description</i>
Light button or 	Buttons and keys are shown in bold print or as a key symbol.
	Information appearing on the radio's display is shown using the special display font.
PHONE	Menu items (softkeys) are similar to the way they appear on the radio's display.

---

## Notes

# Contents

---

DECLARATION OF CONFORMITY .....	ii
<b>Foreword .....</b>	<b>iii</b>
Product Safety and RF Exposure Compliance .....	iii
Computer Software Copyrights .....	iii
Document Copyrights.....	iv
Disclaimer .....	iv
Trademarks .....	iv
Notations Used in This Manual .....	v
<b>Contents .....</b>	<b>vii</b>
<b>Introduction .....</b>	<b>1</b>
Identifying Your Radio .....	3
Control Head Operation .....	4
Status Display .....	5
Alert Tones .....	5
<b>Basic Operating Procedures .....</b>	<b>9</b>
Turn On the Radio .....	9
Set the Volume .....	11
Adjust Display Brightness .....	12
Select a Zone or Mode .....	13
Select or Change a Zone .....	14
Select or Change a Mode in the Current Zone .....	15
Select or Change to a Mode Not in the Current Zone .....	16
Select the Home Mode .....	17
Transmit (Conventional Modes Only) .....	18
Transmit (Trunked Modes Only) .....	18
Select Transmit Power Level .....	20
Monitor Conventional Mode Activity .....	21
Adjust the Squelch Level .....	22
<b>General Radio Features .....</b>	<b>25</b>
Emergency Call and Alarm .....	25
Emergency Call .....	25
Initiate an Emergency Alarm .....	26
Initiate an Emergency Call .....	27
Initiate an Emergency Call and Alarm .....	29

Initiate a Silent Emergency Alarm .....	31
Special Considerations for Emergencies .....	32
Scan Operation .....	33
Turn On Scan .....	34
Turn Scan On While Disregarding the Squelch Code (Conventional Modes Only) .....	36
View a Scan List .....	38
Transmit While Scan Is On .....	40
Temporarily Delete a Nuisance Mode With Scan On (W7 and W9 Models Only) .....	42
Restore a Nuisance Mode (W7 and W9 Models Only) .....	43
Change Mode Priorities While Scan Is On (W7 and W9 Models Only) .....	44
Restore Mode Priorities in a Scan List (W7 and W9 Models Only) .....	45
Program a Scan List .....	46
Hang Up Box (HUB) .....	53
Optional External Alarms (Horn and Lights) .....	53
Activate the External Alarm(s) .....	54
Change the Selected Alarms .....	56
Receiving a Call While Alarms Are Turned On .....	57
Time-Out Timer .....	60
Push-To-Talk Identification (PTT-ID) .....	60
<b>Conventional Radio Features .....</b>	<b>61</b>
Status Calls (Digital Modes Only) .....	61
Send a Status Call (Models W7 and W9 Only) .....	61
Send a Direct-Entry Keyboard (DEK) Status (Digital Modes Only) .....	64
Smart PTT .....	66
Conventional Talkgroup Calls .....	66
Digital Modes Only .....	66
Select a Conventional Talkgroup .....	67
Conventional Talkaround .....	69
Talk Direct (Mobile-To-Mobile) .....	69
<b>Trunking Operation .....</b>	<b>71</b>
Telephone Interconnect List .....	71
Answer a Phone Call .....	72

---

Initiate a Telephone Call From the List .....	74
Unlimited Telephone Interconnect (Models W7 and W9 Only) .....	77
Call a Phone Number Not in the List .....	77
Store a Number in the List .....	79
Edit a Name in the List (Models W7 and W9 Only) .....	80
Enhanced Private Conversation (Digital Modes Only) .....	84
Answer an Enhanced Private Conversation Call .....	84
Initiate an Enhanced Private Conversation Call .....	87
View Your Unit ID Number .....	92
Store a Unit ID Number in the List (Models W7 and W9 Only) .....	94
Edit a Name in the List (W7 and W9 Models Only) .....	96
Call Alert Page (Digital Modes Only) .....	99
Send a Call Alert Page .....	100
Store a Unit ID Number In the List (Models W7 and W9 Only) .....	105
Edit a Name in the List (Models W7 and W9 Only) .....	107
Failsafe .....	110
Dynamic Regrouping (Digital Modes Only) .....	112
Receive a Dynamic Regrouping ID Assignment (Models W7 and W9 Only) .....	112
Select Enable and Disable (Digital Modes Only) .....	113
Request a Dynamic Regrouping (Models W7 and W9 Only) (Digital Modes Only) .....	113
SmartZone™ (Models W7 and W9 Only) .....	115
Site-Button Operation .....	116
Lock Onto a Site .....	117
Site Trunking .....	118
Out-of-Range Indication .....	118
Trunked Announcement .....	119
Initiate an Announcement .....	120
<b>Secure Operation .....</b>	<b>121</b>
Receive a Private Message .....	121
Transmit a Private Message .....	123
System Considerations .....	123
Loss Indication .....	124
Select an Encryption Key (Conventional Only) .....	124
Select an Encryption Index (Conventional Only) .....	127

Contents

---

**Troubleshooting** ..... 130

**Glossary** ..... 131

**Commercial Warranty**..... 135

Limited Warranty .....135

    MOTOROLA COMMUNICATION PRODUCTS .....135

**Index** ..... 139

# Introduction

---

The ASTRO Digital Spectra and Digital Spectra Plus radios are among the most sophisticated two-way radios available. They can operate in the following frequency ranges:

VHF	UHF	800 MHz
136-162 MHz	403-433 MHz	806-824 MHz
146-174 MHz	450-482 MHz	851-870 MHz
	482-512 MHz	

These channels provide maximum communications capability under varying operating conditions.

One of the newest in a long line of quality Motorola products, the ASTRO Digital Spectra and Digital Spectra Plus radios provide improved voice quality across more of your coverage area. The digital process called *embedded signaling* intermixes system signaling information with digital voice, resulting in improved system reliability and the capability of supporting a multitude of advanced features. Such features add up to better, more cost-effective two-way radio communications.

ASTRO digital technology is also helping to provide the solution to improved spectral efficiency requiring only half as much bandwidth per channel (12.5kHz) compared to analog technology (25/30 kHz). The net benefit to you is fewer users per channel or more users per system.

**Note:** All references in this manual to ASTRO Digital Spectra are applicable to ASTRO Digital Spectra Plus, except when a difference is clearly stated. These differences particularly apply to the display at start-up.

ASTRO Digital Spectra and Digital Spectra Plus radios can include an optional RS-232 data port to interface with external devices, such as certain fax machines and laptop computers. ASTRO Digital Spectra and Digital Spectra Plus voice radios and data terminals can access the same channel without interfering with each other.

**Note:** In this manual—

*Analog mode* refers to a mode that uses traditional, non-ASTRO-digital signaling.

*ASTRO mode* refers to a mode that uses ASTRO digital signaling.




Your ASTRO Digital Spectra or Digital Spectra Plus radio utilizes Motorola's revolutionary **FLASHport™** technology. This allows your radio's capabilities to be flexible, because **FLASHport** makes it possible to add software that drives these capabilities both at the time of purchase and later on. Previously, changing a radio's features and capabilities meant significant modifications, or buying a new radio. But now, similar to how a computer can be loaded with different software, your radio's features and capabilities can be upgraded with software.

**FLASHport** allows you to add software to your radio as your needs change and as technology advances, making your radio investment go further.

**FLASHport** is the future of radio communications, and it's yet another example of Motorola's commitment to your satisfaction.


## Identifying Your Radio

The ASTRO Digital Spectra and Digital Spectra Plus radios' capabilities, and the operation of their features, differ with each model. Each higher-numbered model has more feature capabilities than the previous models. Your radio is one of the following models:

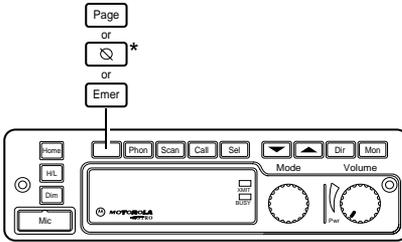


### Model W4

Has rotary **Mode** and **Volume** knobs and a limited set of control buttons, eight-digit display, no 12-button keypad.

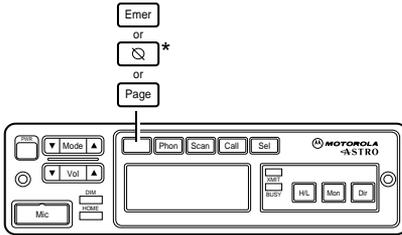

### Model W5


Has a limited set of control buttons, eight-digit display, no 12-button keypad.

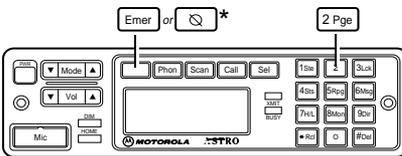

### Model W7

Has the keys and display that the W5 model has, plus a 12-button keypad.

\* [Secure icon] = SECURE

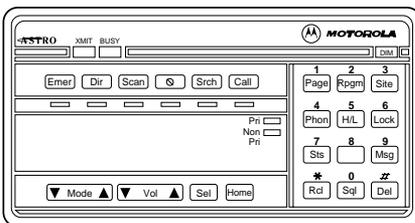

### Model W9

Has the keys and keypad that the W7 model has, but has an 11-digit display.


## Control Head Operation

Your advanced control head is designed for ease of use and flexibility of feature control. Before operating the radio, familiarize yourself with the various operating controls, indicators, and alert tones.


You can select trunked talkgroup or conventional channels on your radio. Trunked modes consist of the system/announcement group/talkgroup combination and a time-out timer value. Conventional channels consist of a transmit and receive frequency pair, an associated squelch code pair, and a time-out timer value.

To further simplify operation, other radio features may be slaved to the selected mode by field programming. This *mode slaving* means that the radio is preprogrammed to automatically give you the proper operation for each mode you select.


### Model W4

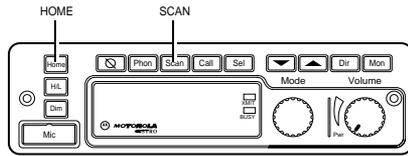


### Model W5

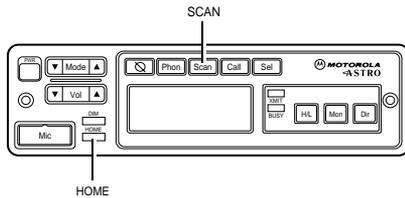

### Model W7

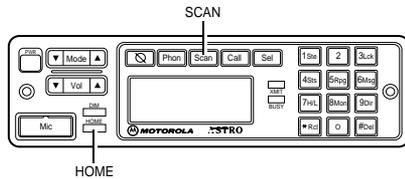

### Model W9

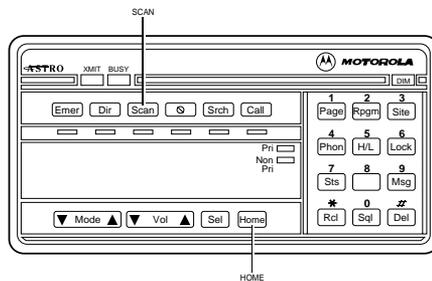

Through field programming, the control head allows you to program your own mode names. The names you assign are clearly shown in the alphanumeric display. At a glance, you can see all the key operating information, including the mode selected or being scanned, and the on/off status of various features. The operating conditions are shown either by the display or by indicators.

## Status Display

The control head display indicates your selected mode, or the currently active receive mode when scan is on. You can turn the various radio features on or off, change modes, and adjust volume.

To exit a feature, such as phone, press the **HOME** button or the feature button (for example, **Phon**).

## Alert Tones

<i><b>Tone Type</b></i>	<i><b>Name</b></i>	<i><b>Description</b></i>
Two high-pitched tones	Private Conversation™	Indicate that a private call has been received.
Four high-pitched tones every six seconds	Call Alert	Indicate that a Call Alert page has been received.
Single, high-pitched tone	Central Acknowledge	Indicates that a Call Alert, emergency alarm, reprogram request, or status/message transmission has been received by the system's central controller.

<b><i>Tone Type</i></b>	<b><i>Name</i></b>	<b><i>Description</i></b>
Four high-pitched tones	Mobile Unit Acknowledge	Indicate that a Call Alert page has been received by the intended unit, or the emergency alarm, reprogram request, or status/message transmission has been acknowledged by the intended dispatcher.
Sound similar to a telephone busy signal	System Busy	Indicates, when you press the microphone push-to-talk (PTT) button, that you cannot transmit because all system radio channels are in use. Release the PTT button and wait for call back.
A series of three short, high-pitched tones	Automatic Call Back	Indicate that a channel is now available for your previously requested transmission.
A series of three short, high-pitched tones (same as automatic call back)	Talk Permit (optional)	Indicate, when you press the microphone PTT button, that the system is accepting your transmission.
Continuous, low-pitched tone	Talk-Prohibit/Out-of-Range	Indicates, when you press the microphone PTT button, that either you are out of the range of the trunked radio system, or the system is out of service, or the channel is busy with the Smart PTT feature enabled.

<b><i>Tone Type</i></b>	<b><i>Name</i></b>	<b><i>Description</i></b>
Single, high-pitched tone every ten seconds	Failsoft	In an unmuted receive condition, indicates a trunked system central controller failure. The radio reverts from trunked operation to a system similar to conventional radio repeater operation. Other system users can be heard sharing the channel.
Continuous, low-pitched tone	Illegal Mode	Indicates that you have entered a mode where normal system traffic will be missed, or you are attempting something which is not allowed. Examples include: forgetting to exit the telephone interconnect mode after a call ends (fleet and subfleet calls cannot be received), attempting to transmit on a receive-only conventional mode, attempting to select a dynamic mode where no dynamic ID assignment has been made.
Brief tone	Volume-Set Tone	Indicate the volume level when you press the <b>Vol</b> rocker button on a quiet channel (models W5, W7, and W9 only).
Brief low-pitched tone	Time-Out Timer Warning	Indicates that your present transmission will soon be disabled.
Single, short, high-pitched tone	Valid Key	Indicates that you pressed a valid key, or you entered a feature configuration state, or you are receiving or transmitting in the clear mode on secure models (with TX Clear Alert Tones enabled).

<b><i>Tone Type</i></b>	<b><i>Name</i></b>	<b><i>Description</i></b>
Single, low-pitched tone	Invalid Key	Indicates that you tried to make an invalid key press, or that an emergency alarm, reprogram request, or status/message was not acknowledged.
Unique chirping sound	Dynamic Reprogramming	Indicates that a dynamic ID is assigned.

# Basic Operating Procedures

## Turn On the Radio

Basic operation is the same for all radio models. Models with additional features are noted.

Do one of the following:

- **Model W4:** Rotate the **Volume** knob clockwise.
- **Models W5 and W7:** Press the power switch in the upper left corner of the control unit.
- **Model W9:** Slide the power switch on the bottom of the control unit to the left.


The display and graphics illuminate, indicating that the radio is on.

When the ASTRO Digital Spectra radio is turned on, **SELF CHK (W4, W5, W7)**, or **SELF CHECK (W9)** is displayed.


For the ASTRO Spectra Plus, **SPECTRA+** is displayed.

The radio then checks itself for problems.


### Model W4

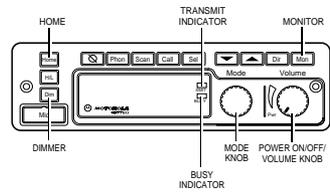


### Model W5

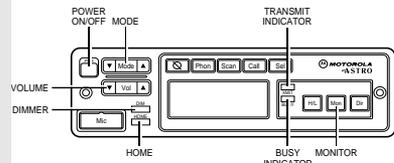

### Model W7

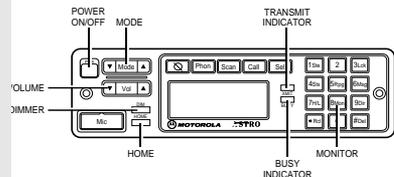

### Model W9

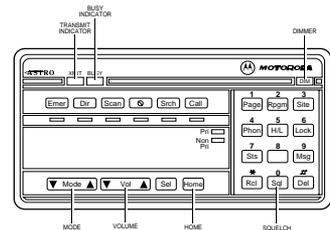

**Note:** If FL##/## (W4,W5,W7) or FAIL ##/## (W9) appears in the display, the radio will not function until the condition has been corrected.

If ER##/## (W4,W5,W7) or ERROR ##/## (W9) appears, some non-critical data has been changed. If either of these displays appear, if the display goes blank, or if the unit appears to be locked up, refer to “Troubleshooting” on page 130.

## Set the Volume

Choose one of the following:


- Model W4:** Rotate the **Volume** knob clockwise to increase the volume and counterclockwise to decrease the volume.

A volume indication (**0-15**) appears on the display; for example, VOL 10.

- Models W5, W7, and W9:** Press and hold the **Vol** rocker button.

A volume indication (**0-15**) appears on the display. For example, VOL 10 (W5, W7) or VOLUME 10 (W9).

Hold the button until the sound level increases (or decreases) to the desired level.

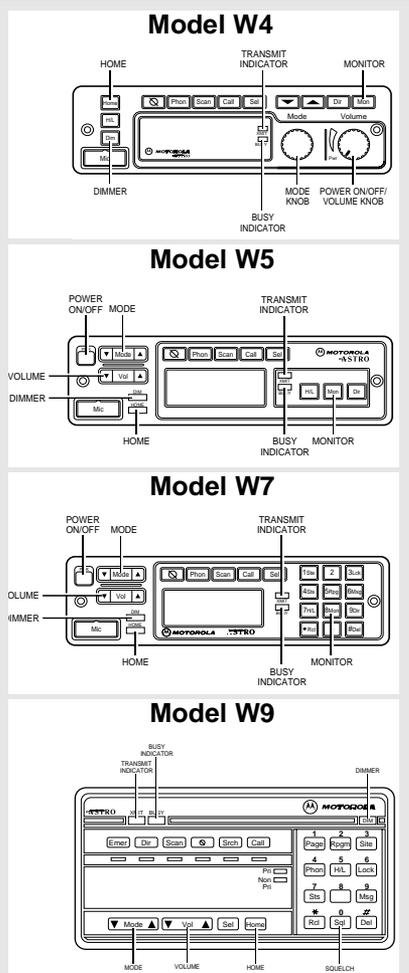


## Adjust Display Brightness

Press the dimmer button (**Dim** on W4, or **DIM** on W5, W6, and W7) to change the display brightness to one of four levels:

- Off to high
- High to medium
- Medium to low
- Low to off.

In Off, both the display and backlight are off (used for surveillance operations).

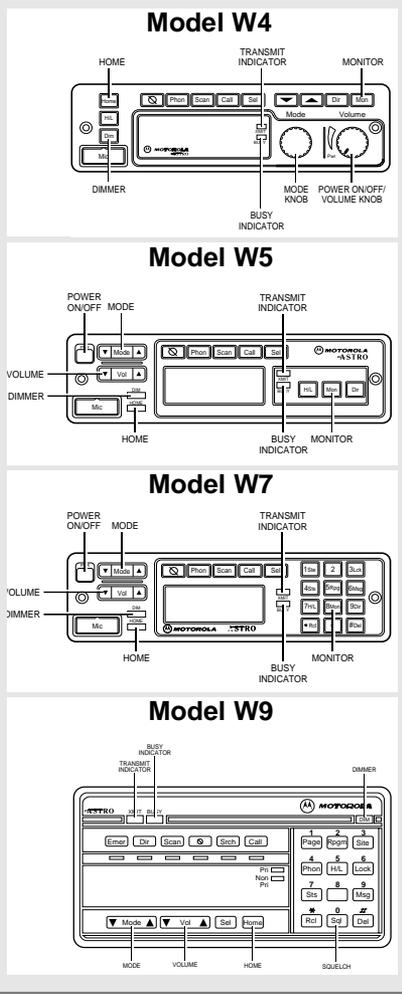


## Select a Zone or Mode

A zone is a grouping of modes. A mode is a group of characteristics such as transmit/receive frequencies, Private-Line™ codes, radio parameters, and an alphanumeric name.


## Select or Change a Zone

Press the ▲ (Zone up) button or ▼ (Zone down) button.


### Model W4

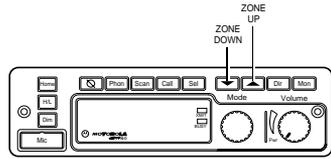

### Model W5

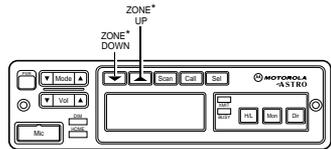


### Model W7

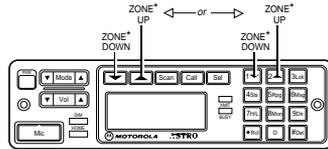

\* Optional button included with radio when Zone/Mode is ordered, but not installed at the factory.


### Model W9

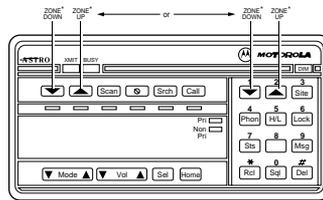

## Select or Change a Mode in the Current Zone

To access a mode in the current zone, do one of the following:


- **Model W4:** Turn the **Mode** knob until the desired mode name is displayed.
- **Model W5:** Press the **Mode** rocker switch until the desired mode name is displayed.
- **Models W7 and W9:**
  1. Press and hold the **HOME** button.
  2. Enter the number by the keypad, and press the **HOME** button again.

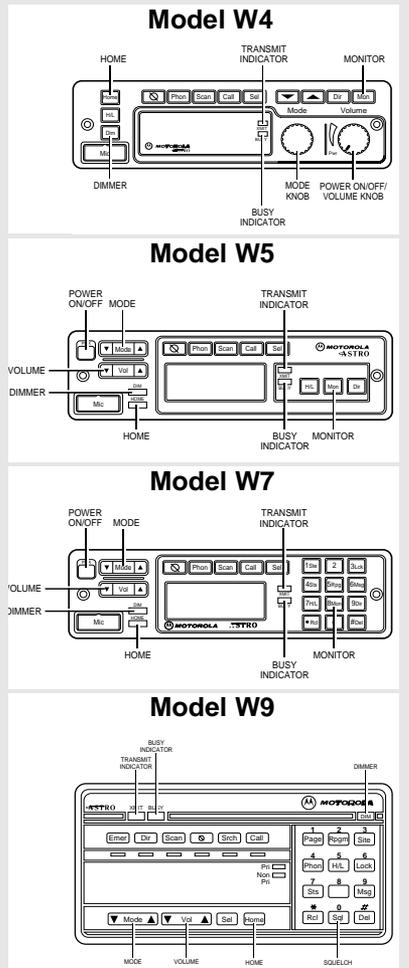

## Select or Change to a Mode Not in the Current Zone

- 1 To access a mode that is not in the current zone, press the Zone up ▲ button or Zone down ▼ button to move to the zone containing the mode.

**Note:** The Zone up ▲ and Zone down ▼ buttons are optional buttons included with the radio when zone/mode is ordered.

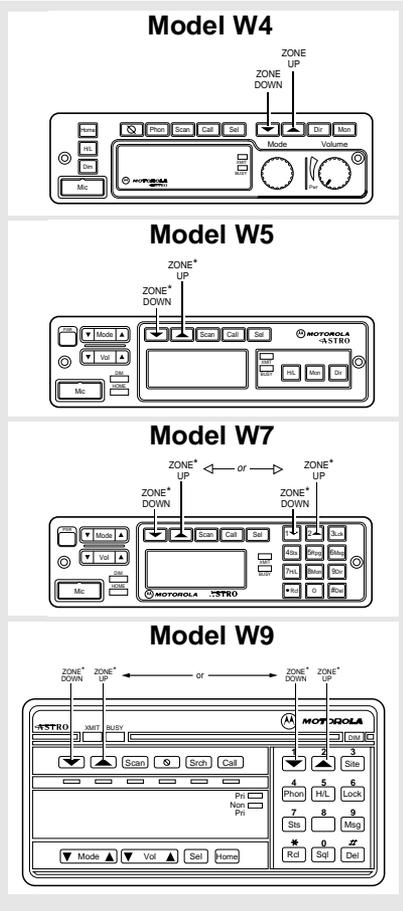


- 2 Do one of the following:
  - **Model W4:** Turn the **Mode** knob to select the desired mode.
  - **Models W5, W7, and W9:** Press the **Mode** rocker switch to select the desired mode.

## Select the Home Mode

Press the **Home** button (W4, W9) or **HOME** button (W5, W7) to select the home mode contained within the home zone, from any other zone and mode in the radio.

This feature must first be enabled by a qualified radio technician.

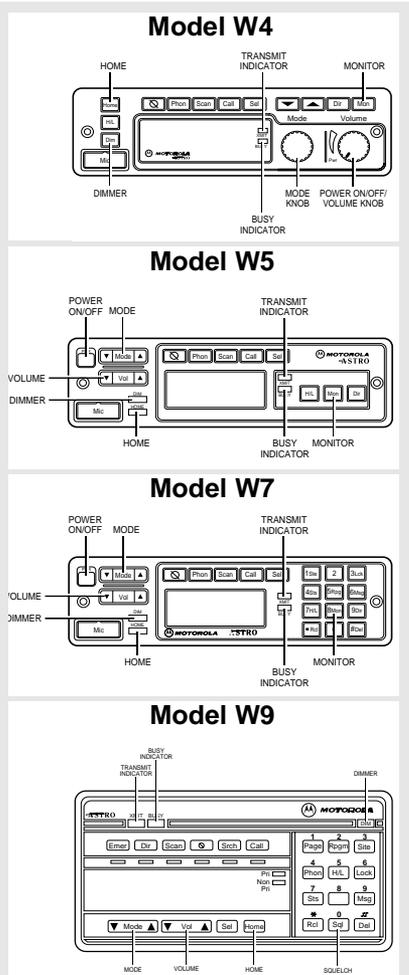

## Transmit (Conventional Modes Only)

- 1 Lift the microphone off-hook, and listen for activity on that mode.
  - 2 If you hear no activity, press and hold the microphone **PTT** button.
- 

## Transmit (Trunked Modes Only)

- 1 Lift the microphone off-hook, and press the microphone **PTT** button.
- 2 Do one of the following:
  - If you hear three quick tones, or if you hear no tone and the red **XMIT** (transmit) indicator lights steadily, proceed with your message.

Release the **PTT** button to receive.

**OR**

- If you hear a busy tone, all trunked channels are in use.

1. Release the **PTT** button and wait for three, quick, call-back tones.

When a call back is received, your radio will automatically key up for three seconds so that you can begin talking.

2. During this time, press and hold the **PTT** button, and proceed with your message.

3. Release the **PTT** button to receive.

**OR**

- If you hear a continuous low-pitched tone, you are out of the system's range.

The red **XMIT** indicator may flash several times as the radio tries to access the system.

Release the **PTT** button and try again when the vehicle is driven within range of the system.

---

## Select Transmit Power Level

The **L PWR** button lets you select (toggle) the transmit power level.

Press the **L PWR** button.

The display momentarily shows LOW PWR or HIGH PWR (W4, W5, W7), or LOW POWER or HIGH POWER (W9) to indicate the transmit power level selected.

Also, when low-power transmission is selected, the **L PWR** indicator lights.

This feature must first be enabled by a qualified radio technician.

## Monitor Conventional Mode Activity

This feature allows you to monitor channel traffic on conventional channels by defeating the coded squelch.

Do one of the following:

- Take the microphone off hook,


OR

- **Models W4, W5, and W7:** Press the **Mon** button momentarily.

**MON ON** shown on the display indicates that the radio is monitoring.

- **Model W9:** Press the **SqL** button momentarily.

**MONITOR ON** shown on the display indicates that the radio is monitoring.

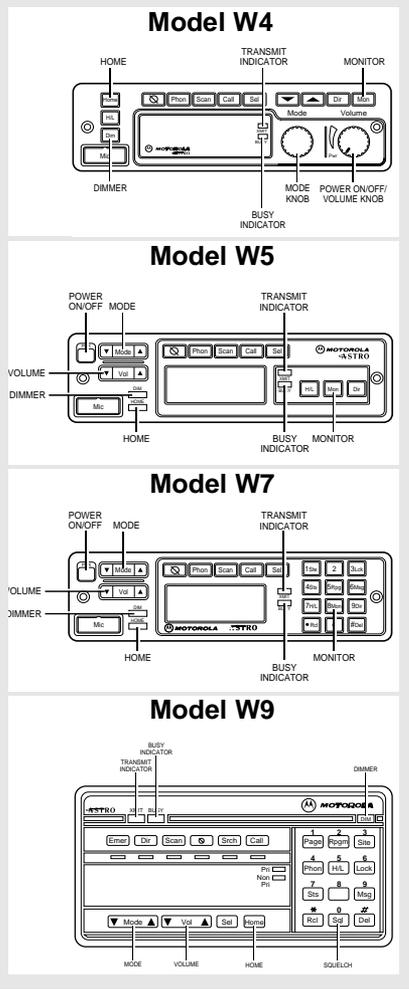

## Adjust the Squelch Level


1 Choose one of the following:

- **Models W4, W5, and W7:** Press and hold the **Mon** button

SQ L XX is displayed, where XX is a squelch level setting of 0 to 15.


- **Model W9:** Press and hold the **SqL** button momentarily.

SQUELCH XX is displayed, where XX is a squelch level setting of 0 to 15.

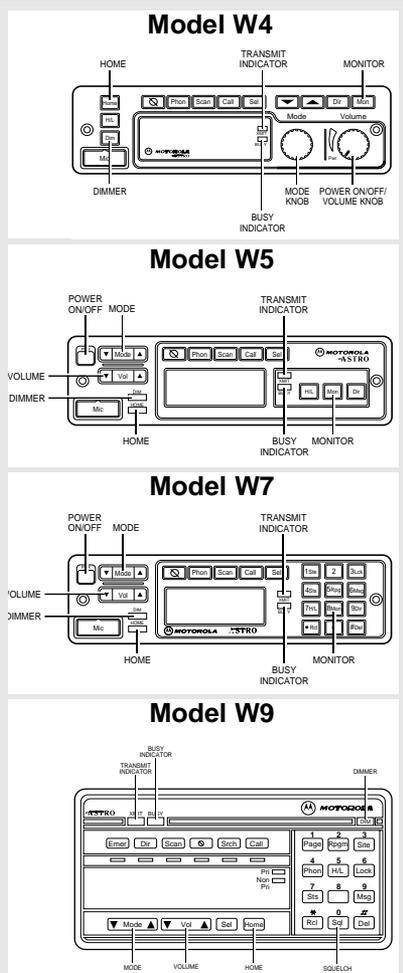

2 Adjust the squelch level by turning the **Mode** knob (W4) or by pressing the **Mode** rocker switch (W4, W5, W9) to reach the desired squelch level setting.

- 3** Press the **Home** button (W4, W9) or the **HOME** button (W5, W7) to return to the selected channel.

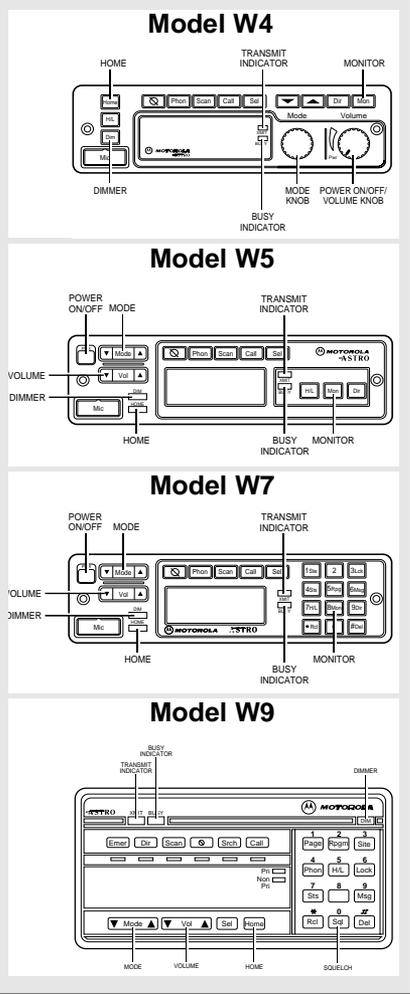

## Notes

# General Radio Features

---

## Emergency Call and Alarm

The emergency call and alarm features allow you to have priority channel access and/or send an emergency data transmission to the dispatcher in an emergency situation.

The desired type of emergency feature—alarm, call, call and alarm, or silent alarm—can be preprogrammed by a qualified radio technician.

The radio must be turned on to activate any emergency feature.

## Emergency Call

Emergency call gives you priority access to a voice channel for all subsequent transmissions after you press the emergency button. The level of priority access is determined by the system manager.

### SmartZone™ Emergency Call Receive Operation

A radio configured for SmartZone operation displays **EMER RCV** whenever it receives an emergency call. The display alternates with the selected-mode display as long as the radio is unmuted to the emergency call.

## Initiate an Emergency Alarm

The emergency alarm feature sends a data transmission to alert the dispatcher of your emergency condition and identify your unit ID.





Press the emergency button.

A tone sounds and the display alternates EMERGENCY (W4, W5, W7) or EMERGENCY (W9) with the current zone/channel.

**For trunking modes,** a high-pitched tone indicates that the alarm has been received by the trunked system's central controller.

A dispatcher acknowledgment (four high-pitched tones) and an ACK RCVD display follow.


The radio automatically returns to normal operation. No further action is required.

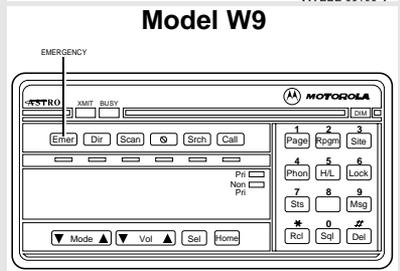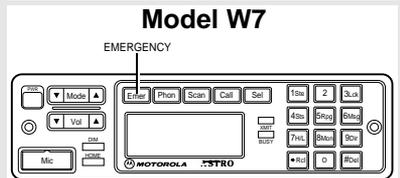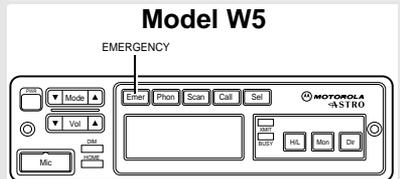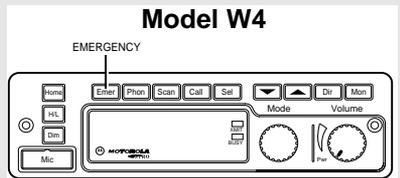

## Initiate an Emergency Call

- 1 Press the emergency button.

A tone sounds and the display alternates EMERGENCY (W4, W5, W7) or EMERGENCY (W9) with the current zone/channel.

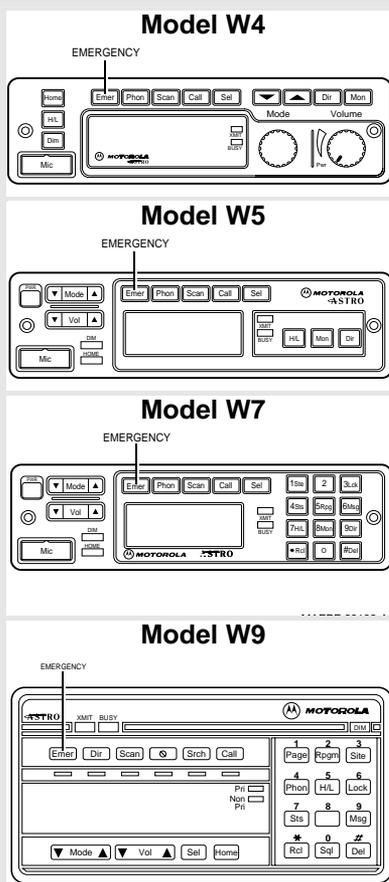

- 2 Press the **PTT** button and announce your emergency.

- 3** After completing the emergency call, press and hold the emergency button until a tone sounds.

The alternating EMERGENCY (W4, W5, W7) or EMERGENCY (W9) display disappears, and the radio returns to normal operation.

## Initiate an Emergency Call and Alarm


If the radio has both emergency call and alarm features, it automatically proceeds to the call mode after the alarm is acknowledged.

- 1 Press the emergency button to activate the emergency call/alarm feature.

The display begins alternating EMERGENCY (W4, W5, W7) or EMERGENCY (W9) with the current zone/channel.

**For trunking modes,** a high-pitched tone sounds, indicating that the alarm has been received by the trunked system's central controller.

A dispatcher acknowledgment (four high-pitched tones) follows, accompanied by an ACK RCVD display.

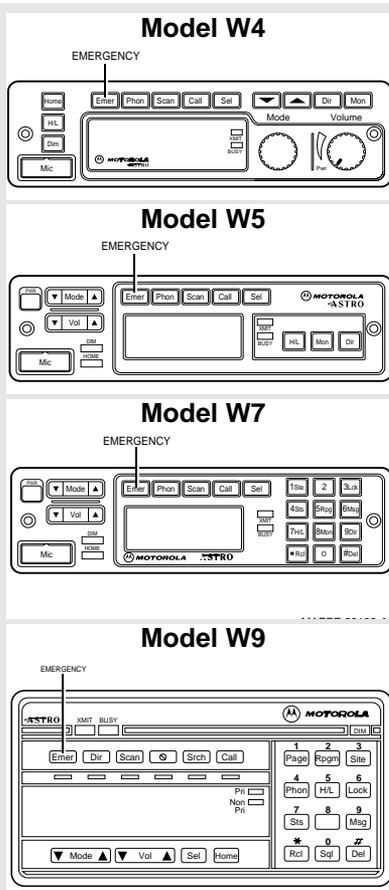

- 2 Press the **PTT** button and announce your emergency.

- 3** To exit from the emergency state altogether, press and hold the emergency button until a tone sounds.


The alternating EMERGENCY (W4, W5, W7) or EMERGENCY (W9) display disappears, and the radio returns to normal operation.

**Note:** Turning the radio off also cancels the emergency state.

## Initiate a Silent Emergency Alarm

- 1 Press the emergency button to activate the silent alarm feature.

During a silent emergency alarm, there are no display changes, and the receiver audio mutes so that no indication is given that an emergency alarm has been sent.

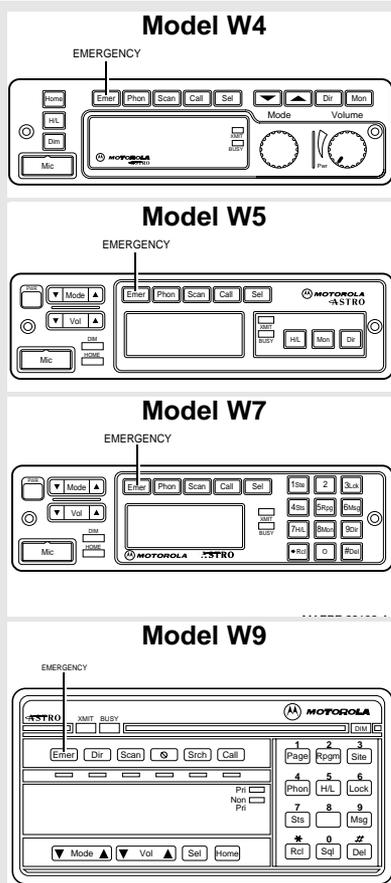

- 2 To exit the silent alarm mode, press and hold the emergency button until a tone sounds.

**Note:** If silent emergency alarm is used with emergency call, pressing the **PTT** button exits the silent mode and initiates the emergency call.

## Special Considerations for Emergencies

- If you press the emergency button while in a mode that has no emergency capability, a low-pitched tone sounds.
- If the unit is out of the range of the system and/or the emergency alarm is not acknowledged, a tone sounds and the display shows NO ACK.
- If you press the emergency button, then change to a mode that has no emergency capability, a NO EMERG (W4, W5, W7) or NO EMERGENCY (W9) display alternates with the mode name display, and a continuous low-pitched tone sounds until a valid emergency mode is selected or until the emergency is cancelled.
- When an emergency is active, changing to another mode where emergency is enabled (trunked or conventional) causes an emergency alarm and/or emergency call to be active on the new mode.

## Scan Operation

The scan feature allows you to monitor activity on different conventional or trunked modes by scanning a *scan list* of modes. The modes to be scanned in a scan list are programmed by a qualified radio technician. You can select the modes to be scanned in a scan list if *operator-selectable scan* is enabled.

There are three types of scan lists available:

- Conventional—Comprises up to 16 different conventional-only modes
- Trunked Priority Monitor—Comprises up to 10 modes that are all from the same trunked system
- Talkgroup Scan—Comprises up to 10 combined conventional modes and modes from one trunking system

The radio supports both priority and non-priority scanning. With priority scanning enabled, a scan list can have one mode assigned as the first-priority mode and a second as the second-priority mode.

All ASTRO Digital Spectra and Digital Spectra Plus radios support automatic scanning (autoscan), which can be programmed into the radio by a qualified radio technician. With this feature, the radio begins scanning whenever you select a mode to which a scan list is assigned.

**Note:** You cannot turn scan off on a mode that has autoscan enabled.

If multiple scan types are enabled in the radio, the type of scan that is activated depends on the personality of the mode selected when the **Scan** button is pressed. For all types of scan, the selected mode is, by default, a member of its own scan list.

Scan lists stay in memory when you turn scan off, turn the radio off, or disconnect the radio from the battery.


## Turn On Scan

Press the **Scan** button momentarily on a non-autoscan mode to start scanning.

The **Scan** indicator lights and a list of modes is scanned for activity.

When a scanned mode becomes active, the display changes to show the active mode name, the appropriate priority indicator lights, and the radio unmutes.

The radio will not begin scanning again for a predetermined *hang time* after the call ends, giving you time to respond. The hang time is typically three seconds (by default), but can be changed by a qualified radio technician.

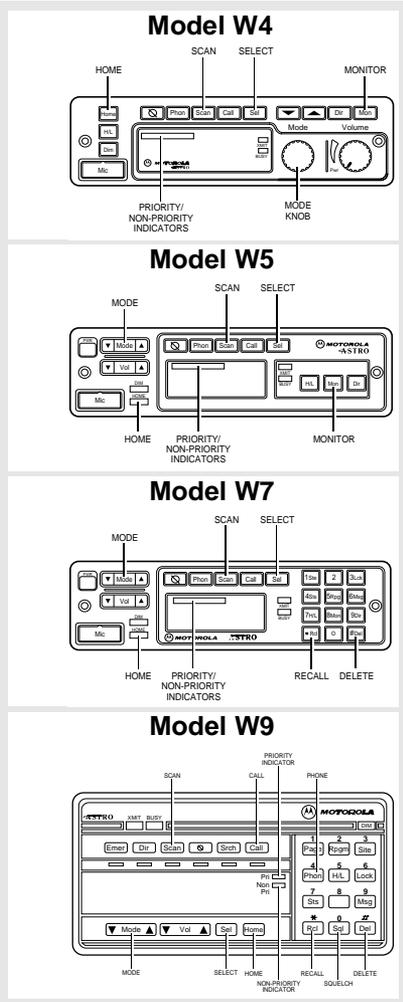

**Note:** A lit **N PRI** (non-priority) indicator means that the active mode is a non-priority member of the scan list (for all scan types).

A solidly-lit **PRI** (priority) indicator means that the active mode is the priority 2 member of the scan list (Trunking Priority Monitor and Conventional scan types only).


A blinking **PRI** indicator means that the active mode is the priority 1 member of the scan list (Trunking Priority Monitor and Conventional scan types only).

## Turn Scan On While Disregarding the Squelch Code (Conventional Modes Only)


Choose one of the following:

- **Models W4, W5, and W7:** Press the **Mon** button momentarily. The brief **MON ON** display indicates that the radio is disregarding the squelch code.
- **Model W9:** Press the **SqL** button momentarily. The brief **MONITOR ON** display indicates that the radio is disregarding the squelch code.


### Model W4

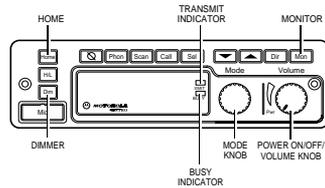


### Model W5

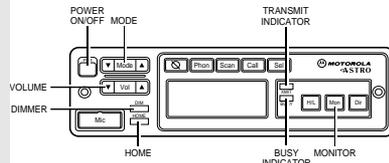

### Model W7

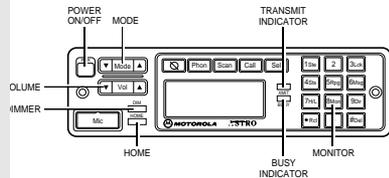

### Model W9

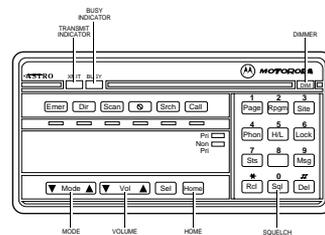


**Note:** While scanning for activity, you can still receive fleetwide, system-wide, dynamic regrouping, incoming telephone interconnect and Private Conversation/Call Alert calls. Respond to these types of calls as you would normally on the selected mode. However, when scanning different modes while in talkgroup scan, incoming Private Conversation/Call Alert calls may be missed.

## View a Scan List

- 1 Press and hold the **Scan** button until the **Scan** indicator blinks and a beep is heard.

The radio suspends scanning while a scan list is being reviewed.

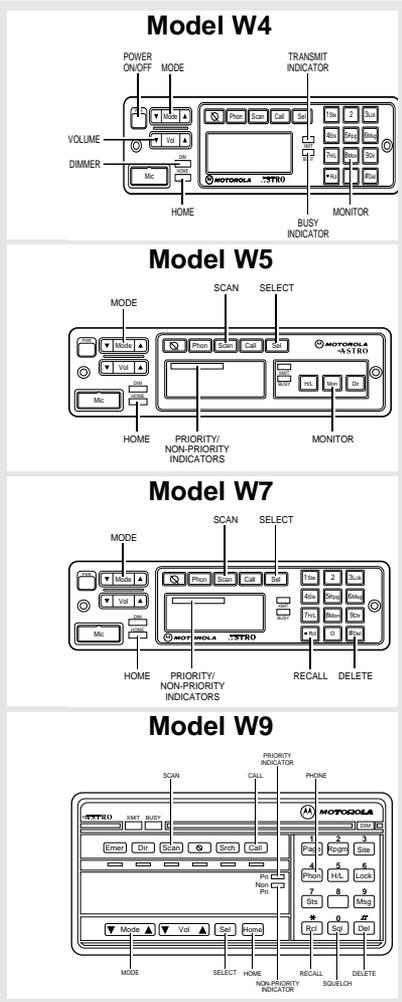




## Transmit While Scan Is On

### Radio Programmed for Talkback Scan

Press the microphone **PTT** button to transmit on the mode indicated by the display.

The radio does not begin scanning again for a predetermined hang time (programmable by a qualified radio technician) after you release the **PTT** button, allowing the other party to respond.





If the other party responds within the hang time, scanning does not resume until the full hang time expires after they have finished speaking, allowing the conversation to be completed.

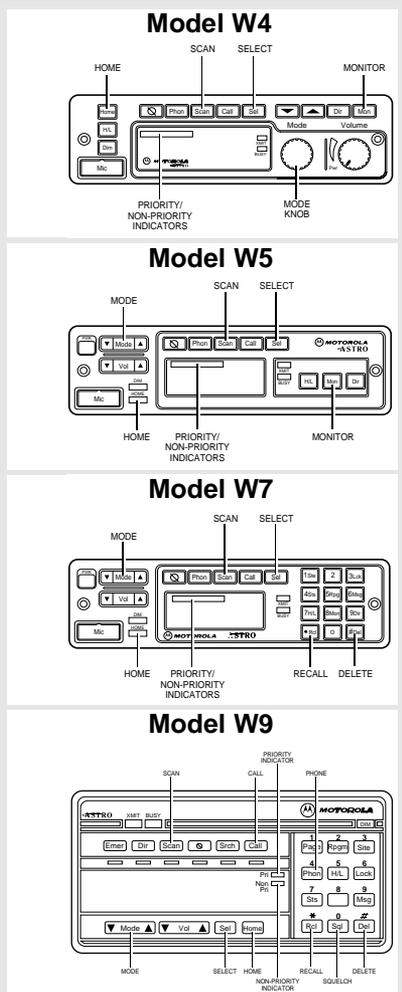

**Note:** To transmit on the selected channel if another channel is active, first turn scan off by pressing the **Scan** button momentarily.

## Radio Programmed for Non-Talkback Scan

In selected mode or fixed mode, press the microphone **PTT** button at any time to transmit on the selected mode or fixed mode.

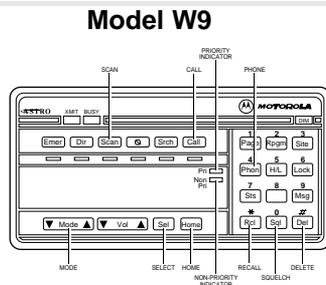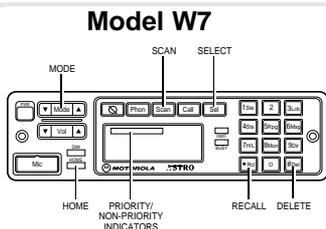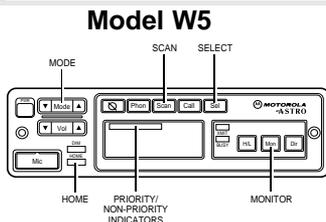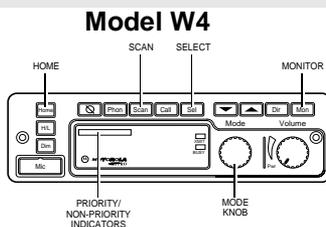


**Note:** To make a Call Alert page, or Private Conversation call while scanning, press the **Page** or **Call** button. The call is entered on the selected mode and scanning is halted until the call is exited by pressing **HOME** or the feature button, **Page** or **Call**.

## Temporarily Delete a Nuisance Mode With Scan On (W7 and W9 Models Only)

To temporarily delete a mode that you do not wish to hear (nuisance mode), press the **Del** button once while the mode is active (indicated by the display).

You can delete undesired modes.


**Note:** Priority modes, the selected mode, and the designated transmit mode cannot be deleted.

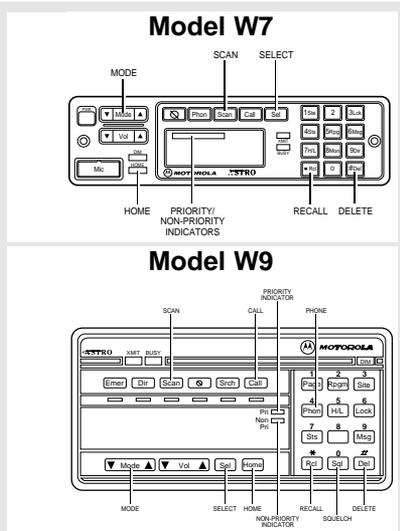

## Restore a Nuisance Mode (W7 and W9 Models Only)

To restore the original scan list, do one of the following:

- Press the **Rcl** button.
- Turn scan off, then on.
- Change modes.
- Turn off the radio, and then turn it back on.

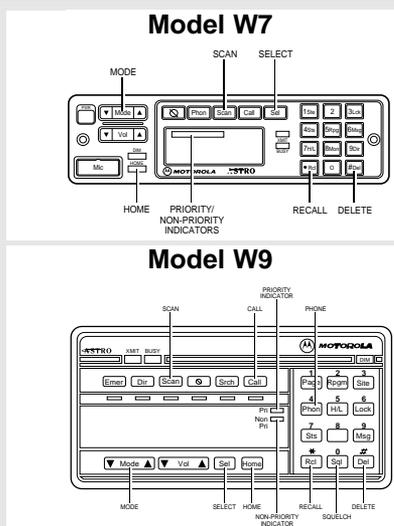


**Note:** Nuisance mode delete can be disabled by a qualified radio technician.

## Change Mode Priorities While Scan Is On (W7 and W9 Models Only)

When active, this dynamic priority feature allows you to change the priority of a non-priority mode in the scan list to priority 2, press the **Sel** button.

To change the priority of a non-priority channel in the scan list to priority 2, press the **Sel** button.


You cannot alter the status of the priority 1 member.

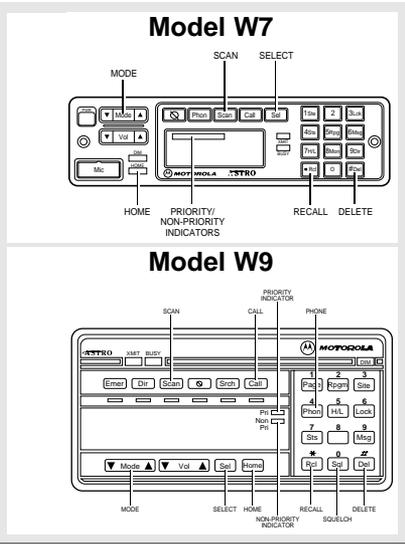

## Restore Mode Priorities in a Scan List (W7 and W9 Models Only)

To restore the original mode priorities in a scan list, do one of the following:

- Press the **Rcl** button.
- Turn scan off, then on.
- Change modes.
- Turn off the radio, and then turn it back on.

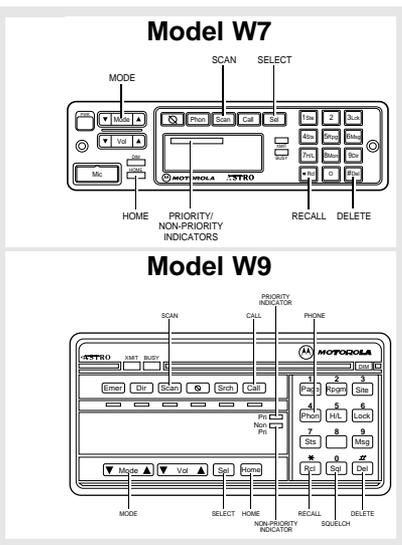


## **Program a Scan List**

To program a scan list, operator-selectable scan list members first must be enabled in the radio programming by a qualified radio technician.

### Add a Channel to the Scan List


- 1 Press and hold the **Scan** button until the scan indicator blinks and a good-key chirp is heard.

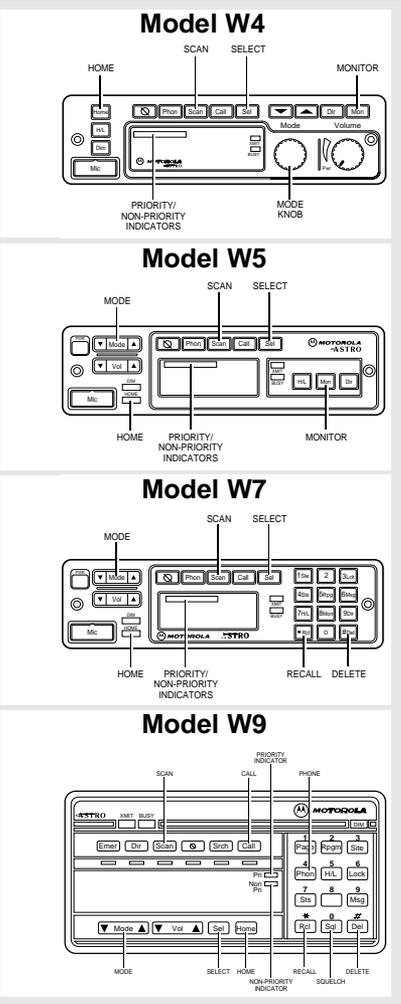


- 2 Using the **Mode** knob (W4) or **Mode** rocker switch (W5, W7, W9), locate the channel to be added.

**Note:** If the desired channel resides in a different zone, press the Zone up ▲ or Zone ▼ down button to change zones, then use the mode changer to find the desired channel.


### Model W4

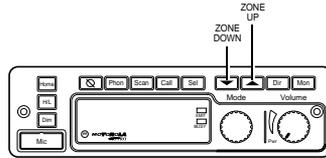


### Model W5

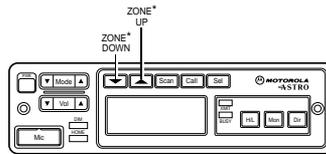

### Model W7

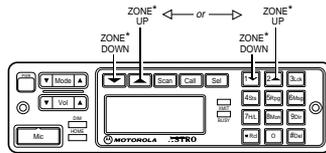

### Model W9

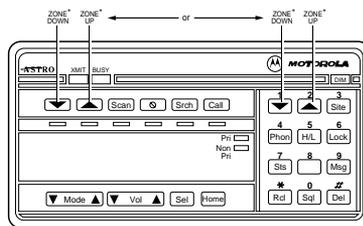

**3** Press the **Sel** button to add the channel.

- 4 Scroll through of the available priority choices, and press the **Sel** button to choose one.


The new channel becomes a member of the scan list assigned to the selected channel when scan list programming was entered.

**Note:** If a scan list is full, you will hear a bad-key chirp each time you press the **Sel** button, and the desired channel will not be assigned to the list.

- 5 Press either the **Scan** or **HOME** button to exit scan list programming and return to normal scan operation.

## Delete a Channel from the Scan List


- 1 Press and hold the **Scan** button until the scan indicator blinks and a good-key chirp is heard.

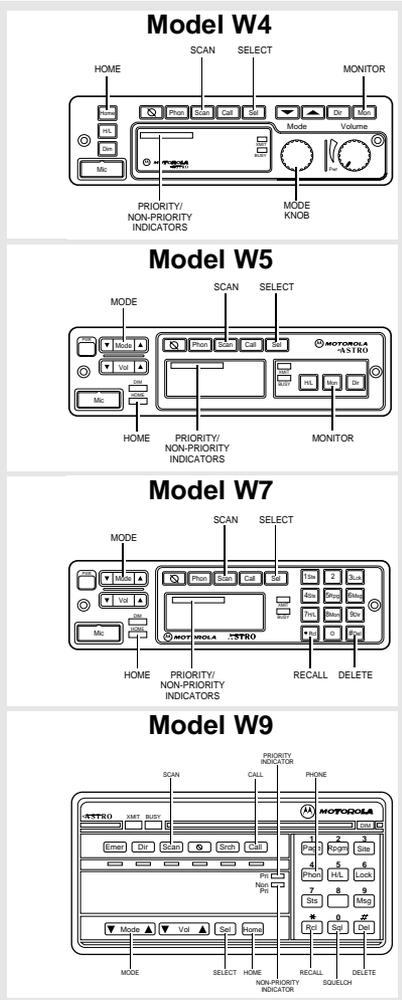


- 2 Using the **Mode** knob (W4) or **Mode** rocker switch (W5, W7, W9), locate the channel to be deleted.

**Note:** If the desired channel resides in a different zone, press the Zone up ▲ or Zone ▼ down button to change zones, then use the mode changer to find the desired channel.


**Model W4**

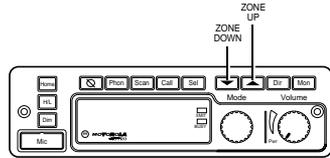


**Model W5**

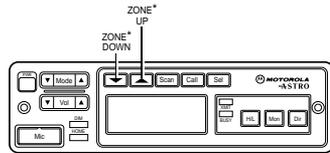

**Model W7**

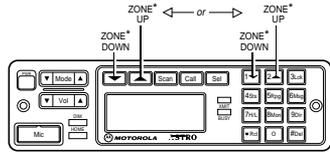

**Model W9**

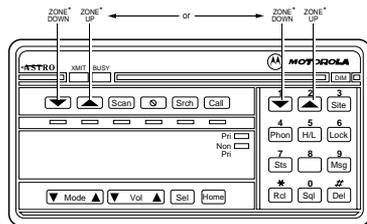

- 3** Press the **Sel** button to scroll through the available priority choices until the priority choice disappears.

This indicates that the channel is no longer a member of the scan list that was assigned to the selected channel.

**(Optionally for Models W7 and W9)** Delete a channel from a scan list by pressing the **Del** button.

- Note:** If you delete all members of a scan list, and scan is subsequently turned on, you will hear a continuous low-pitched tone, and the display will change to `NO LIST` (W4, W5, W7) or `EMPTY LIST` (W9).

You cannot delete the designated transmit mode, the selected mode, or the fixed scan list members. The selected mode, by default, is always scanned when scan is turned on, regardless of whether or not it is explicitly programmed as a scan list member.

- 4** Press the **Scan** or **HOME** button to exit scan list programming and return to normal scan operation.
-

## Hang Up Box (HUB)

If the *hang up box* feature is enabled, scanning of non-priority members is suspended whenever the microphone is removed from the holding clip (hang-up box). This allows the user to complete a conversation while scan is suspended. Scan is resumed once the microphone is returned to the holding clip and the preprogrammed hang time has elapsed.

**Note:** Priority members continue to be scanned while the microphone is removed from the holding clip only if the *Designated Transmit Talkback Channel* is selected to be Talkback in the radio programming.

## Optional External Alarms (Horn and Lights)

All models can be equipped for external alarms (horn and lights) that are activated when a Call Alert page, Private Conversation call, or phone call is received.

These features are useful when you must leave the vehicle, but need to receive any incoming messages.


The radio always powers up with the horn and lights feature enabled.

## Activate the External Alarm(s)

### Non-Permanent Horn and Lights

- 1 Press the **H/L** button momentarily.

The last selected alarm(s) are enabled, and the display alternately shows the enabled alarm(s), then the selected mode.

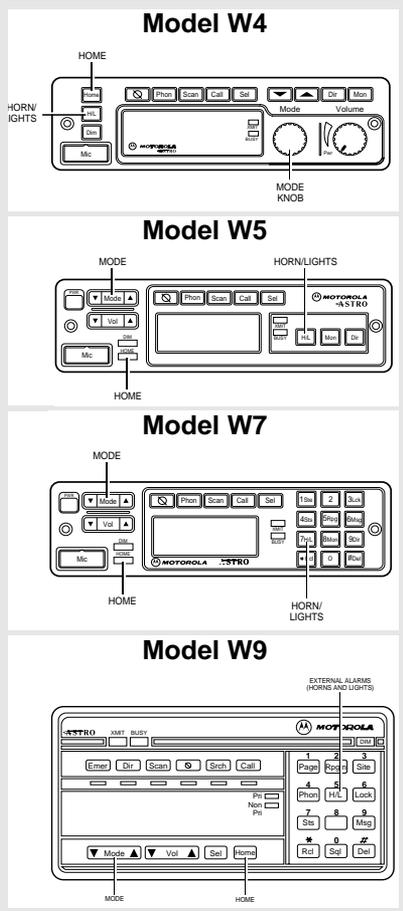


- 2 Press the **H/L** button a second time to turn off the alarm(s).

### Permanent Horn and Lights

- 1 Press the **H/L** button momentarily.

The last selected alarm(s) are enabled.


The display briefly shows the enabled alarms, and then reverts back to the selected mode.

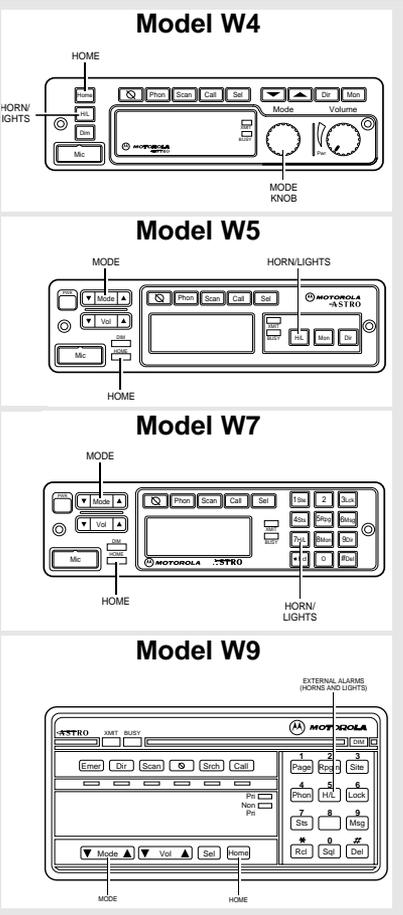

- 2 Press the **H/L** button a second time to turn off the alarm(s).

## Change the Selected Alarms

- 1 Press and hold the **H/L** button until a tone sounds and the display indicates the currently selected alarm.

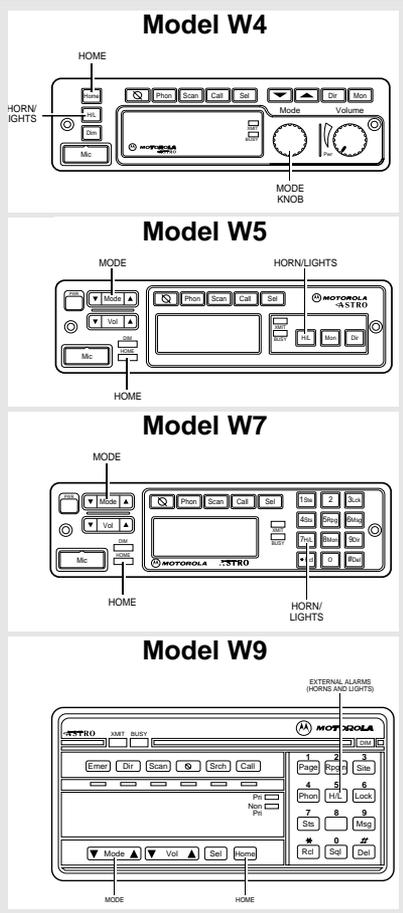

**2** Turn the **Mode** knob (W4) or press the **Mode** rocker switch (W5, W7, W9) to review the choices until the desired alarm is displayed:

- HORN ON
- LITES ON (W4, W5, W7) or LIGHTS ON (W9)
- H/L ON (both horn and lights)

**3** Press the **HOME** or **H/L** button to select the desired alarm and return to normal operation.


## Receiving a Call While Alarms Are Turned On

When a call is received, the vehicle's horn sounds for four seconds, and/or the car lights turn on for 60 seconds. The time interval can be modified by a qualified radio technician.

The display alternates between the type of call received (**CALL**, **PAGE**, or **PHONE**) and the selected mode name.

## Turn Off Non-Rearmable External Alarm

- 1 To turn off the external alarm(s), press the **PTT** button or any control-head button.

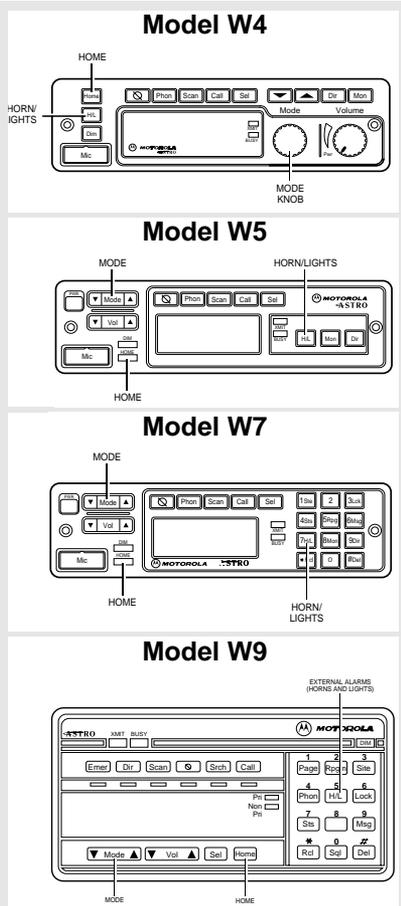

**Note:** Pressing the **Call**, **Page**, or **Phon** button will turn off the external alarm(s) and place you directly in that feature.


The **Vol** rocker switch (or knob) and the **Dim** button have no effect on the state of the external alarm(s).

- 2 To rearm the horn and lights feature, press the **H/L** button momentarily.

### Turn Off Rearmable External Alarms

To turn off the external alarm(s), press the **PTT** button or any control head button other than the **H/L** button.

Pressing the **Call**, **Page**, or **Phon** button turns off the external alarm(s) and places you directly in that feature. When the external alarm(s) are turned off, they will be automatically rearmed.

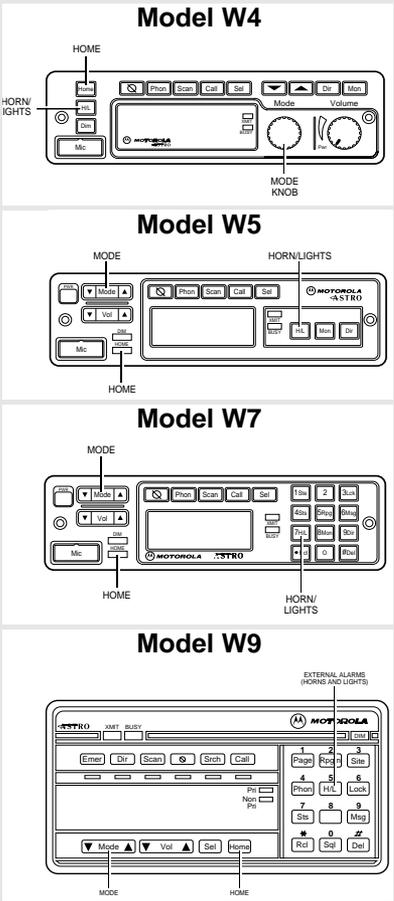

**Note:** Pressing the **H/L** button turns off the external alarm(s) and exits the horn and lights feature. To rearm the feature, press the **H/L** button momentarily.

The **Vol** rocker switch (or knob) and the **Dim** button have no effect on the state of the external alarms.

## Time-Out Timer

All ASTRO Digital Spectra and Digital Spectra Plus models provide a time-out timer function that prevents locking up a repeater or channel by prolonged keying of the transmitter. You cannot transmit longer than the preset timer setting. If you attempt to do so, the radio automatically stops your transmission, and you hear a talk-prohibit tone.

**Note:** You will hear a brief, low-pitched, warning tone four seconds before the transmission times out.

The timer is set for 60 seconds at the factory, but it can be reprogrammed by a qualified radio technician for between 15 and 465 seconds, in 15-second intervals, or it can be disabled entirely for each radio mode.

## Push-To-Talk Identification (PTT-ID)

When you press the PTT button to send a message, your radio ID number is transmitted as part of each voice message. This PTT-ID number is then shown on the receiving radio's display.

For the ASTRO digital mode, up to eight right-justified digits are displayed.

If the receiving radio is changing channels, the PTT-ID display that indicates activity on the new channel is alternately displayed and inhibited for short periods of time.

Pressing the **HOME** button erases the PTT-ID from the display.

The display conditions of PTT-ID must be programmed by a qualified radio technician

# Conventional Radio Features


## Status Calls (Digital Modes Only)

Radio status calls are used to inform the dispatcher of the present state of the mobile unit. For example, a status might be **ENROUTE** or **AT SITE**.

Status names are field programmable. Each radio can have up to 8 separate statuses.

### Send a Status Call (Models W7 and W9 Only)

- 1 Press the **Sts** button, and the last-acknowledged status name is displayed.

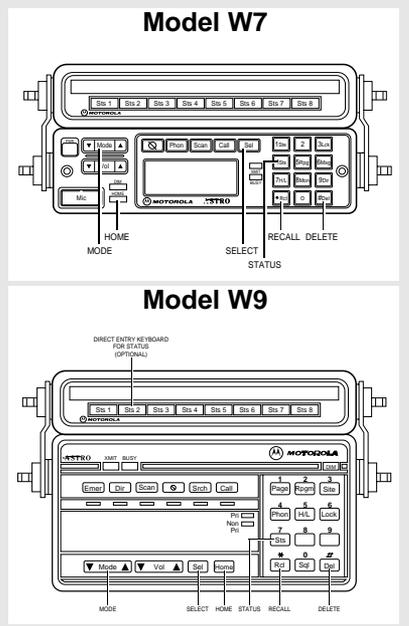

- 2 Press the **Mode** rocker switch to review the list of status names, or use the keypad to enter the number of the status you wish to send.

**Note:** If no button is pressed for a period of time, an inactivity warning will sound.

- 3** With the desired status name or number displayed, press the **Sel** or the **PTT** button to send the transmission.

One of the following conditions occur:

- The radio display shows PLS WAIT (W7) or PLEASE WAIT (W9) until the transmission is received and acknowledged.

When the dispatcher acknowledges the status, four high-pitched tones sound, and the display shows ACK RCVD.

The radio then returns to normal dispatch operation.

- If the status is *not acknowledged* after approximately six seconds, the display alternates between NO ACK and the associated status name. A low-pitched tone also sounds continuously.

- If there is no acknowledgment, do one of the following:

Press the microphone **PTT** button or the **Sel** button to resend the status transmission.

**OR**

Press the **HOME** button to return to normal dispatch operation.

## Send a Direct-Entry Keyboard (DEK) Status (Digital Modes Only)

Press the desired **Sts #** button on the DEK.


The red indicator flashes while the radio is waiting for an acknowledgment. The control head momentarily displays the selected status, then shows **PLS WAIT (W7)** or **PLEASE WAIT (W9)**.

One of the following conditions occur:

- When the dispatcher-acknowledge is received, four high-pitched tones sound, and the status indicator lights solid and remains on to show the last status acknowledged by the dispatch terminal.

The display also temporarily shows **ACK RCVD**.

The radio then returns to normal dispatch operation.

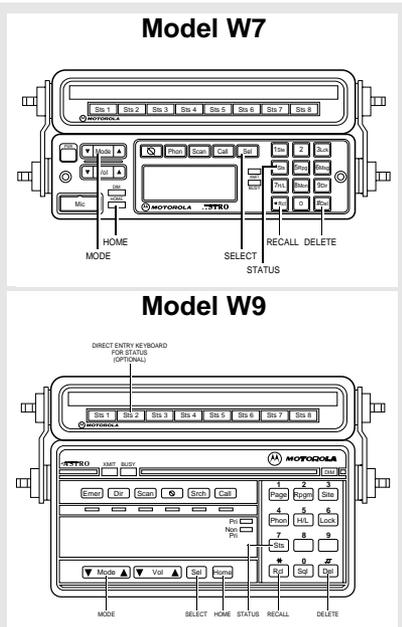

- If the dispatcher-acknowledge is not received, the red indicator continues to flash, the display temporarily shows **NO ACK**, and a low-pitched tone sounds. At the same time, the indicator above the last-acknowledged status lights.

The radio then returns to normal dispatch operation.

Resend the last status.

## Smart PTT

Smart PTT is a per-mode feature that gives the system manager better control of radio operations. When smart PTT is enabled in your radio, you will not be able to transmit on an active mode. If you try to transmit (press the **PTT** button) on a busy or active smart PTT channel, a continuous tone sounds until you release the PTT switch, and the transmission is inhibited.

The yellow **BUSY** LED lights when the radio is receiving to indicate that the mode is busy.

Three radio-wide variations of smart PTT can be enabled on your radio:

- |   |   |
|---|---|
| Transmit Inhibit on Busy Mode with Carrier            | You will not be able to transmit if any activity is detected on the mode.   |
| Transmit Inhibit on Busy Mode with Wrong Squelch Code | You will not be able to transmit on an active mode that has a squelch code other than your own.                               |
| Quick-Key Override                                    | You can override either of the two previous transmit-inhibit states by quick-keying the radio (two quick PTT button presses). |

## Conventional Talkgroup Calls

### Digital Modes Only

This feature allows you to define talkgroups for your conventional system. Talkgroups, combined with selective squelch operation, allow groups of users to transparently share a conventional channel. Talkgroups can be slaved to a personality through programming, or you can select them.

Encryption keys are slaved to talkgroups. When conventional talkgroups are enabled, encryption keys are changed by changing the active talkgroup.

## Select a Conventional Talkgroup

The *Talkgroup Select* feature allows you to manually select any one of the available talkgroups.

- 1 Press the **Tgrp** button.

The display changes to show the last-selected talkgroup.

- 2 Turn the **Mode** knob (W4) or the **Mode** rocker switch (W5, W7, W9) to choose a different talkgroup.

### (Models W7 and W9)

Talkgroups can be accessed by direct keypad entry.

- 3 Press the **Sel** button to save the talkgroup.

The radio returns to the home display.

**Note:** To select the default talkgroup, press the **Sel** button while the radio displays **PRESET**.

Selecting **PRESET** causes the radio to return to its preprogrammed talkgroup.

To abort the talkgroup menu, press the **HOME** button or the **PTT** button:

– Pressing the **HOME** button exits the talkgroup select menu without saving the selected talkgroup choice.

– Pressing the **PTT** button exits the menu without saving the selected talkgroup and allows the radio to transmit.

**Note:** If the encryption key slaved to the new talkgroup is erased, KEY FAIL is displayed and a momentary tone is generated. If the encryption key that is slaved to the new talkgroup is not allowed, ILLEGAL KEY is displayed and a momentary tone is generated.


## Conventional Talkaround

### Talk Direct (Mobile-To-Mobile)

To talk directly to another unit without going through the conventional repeater system:

- 1 Press the **Dir** button momentarily.

The **Dir** indicator lights, indicating that the radio is now transmitting directly to another unit.

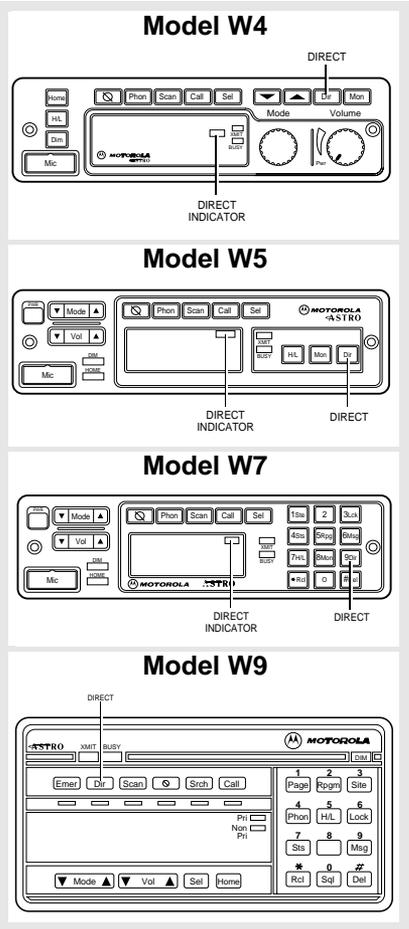

- 2 To return to repeater operation, press the **Dir** button again.

The **Dir** indicator goes out.

**Note:** A conventional personality can be configured to always transmit on the direct mobile-to-mobile frequency. In this case, the **Dir** indicator is lit continuously while the mode is selected.

---

# Trunking Operation

---

## Telephone Interconnect List

With any of the models you can initiate and receive telephone calls if the trunked system is properly equipped. All calls between the mobile operator and the land line are private, regardless of who initiates the call.





All models feature a phone list capability of up to 19 preprogrammed phone numbers. The radios can be programmed by a qualified radio technician so that a name can be assigned to each number in the list.

In addition to the 19 preprogrammed phone numbers, the W7 and W9 models feature unlimited dialing capability with their 12-button telephone keypad.

## Answer a Phone Call

When a phone call is received, telephone-type ringing sounds and the display shows PHONE.

- 1 Press the **Phon** button.

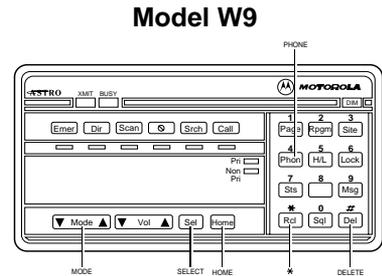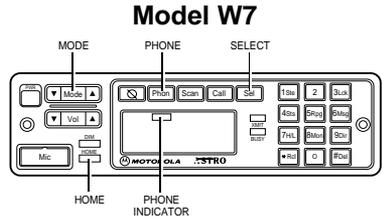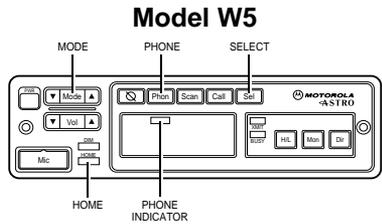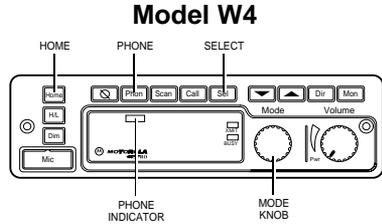

- 2 Press the **PTT** button to talk; release it to listen.

- 3** When the call is completed, press the **HOME** or **Phon** button to hang up and return to normal operation.
-


## Initiate a Telephone Call From the List

- 1 Press the **Phon** button momentarily to select the phone function.

**(All models)** A valid-key chirp is heard.

**(Models W4, W5, and W7 Only)** The phone indicator lights.

The display shows the last number dialed or a blank scratchpad appearing as a series of dashes.

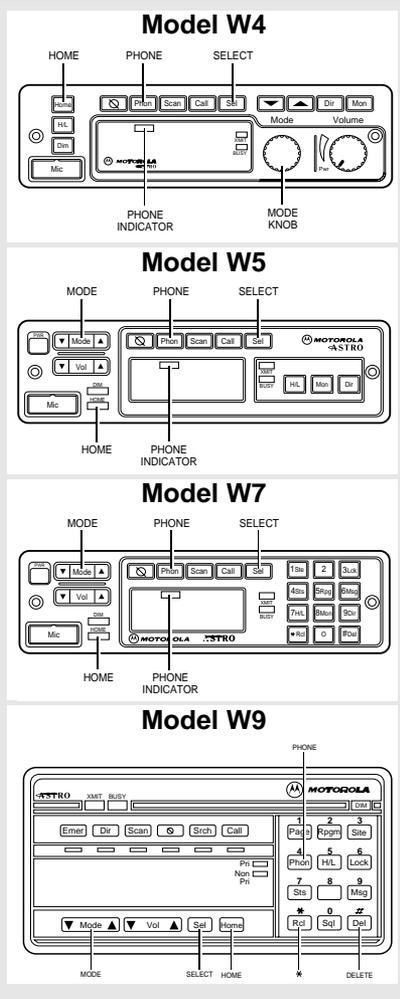

- 2 Turn the **Mode** knob (W4), or press the **Mode** rocker switch (W5, W7, W9) to locate the number you want to call.

The display first shows the name, and then the number.

- 3 Press the **Sel** button or the **PTT** button.

The displayed number is automatically dialed.

- Note:** If the number contains a programmed pause, the dialing pauses briefly when P is displayed. After the brief pause, the rest of the numbers is dialed.

If you are out of range of the trunked system, NO PHONE is displayed, and a continuous low-pitched tone sounds. Press the **HOME** or **Phon** button to resume normal operation.

If the trunked phone interconnect is in use or the phone interconnect is out of service, a telephone-type busy tone sounds, and the display shows PHON BSY (W4, W5, W7) or PHONE BUSY (W9). Your number is automatically dialed when the phone interconnect becomes available. If you hang up, you lose your place in the queue.

If PHON BSY (W4, W5, W7) or PHONE BUSY (W9) is displayed with a low-pitched tone rather than a telephone-type busy tone, the call is not queued. You must hang up and try again.

- 4 When your party answers, press the **PTT** button to talk, and release it to listen.


- 5 When the call is completed, press the **HOME** or **Phon** button to hang up and return to normal operation.

## Unlimited Telephone Interconnect (Models W7 and W9 Only)

### Call a Phone Number Not in the List

- 1 Press the **Phon** button momentarily to select the phone function.

The **Phone** indicator lights (W7 only), and the display shows the last number dialed (W7 and W9).

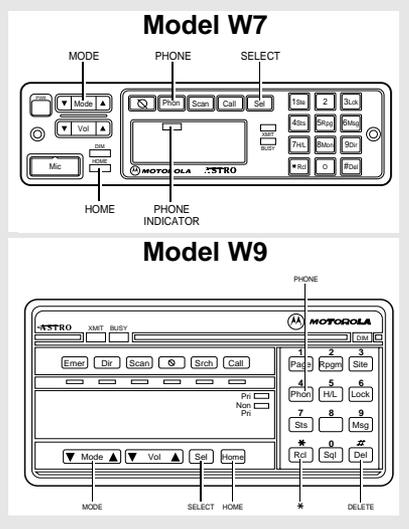

- 2 Enter the desired phone number from the keypad.

The display updates as the numbers are entered.

**Note:** To include a pause in the dialing sequence, press the \* button followed by the # button. A P appears in the display.

To backspace, press the **Mode** down rocker switch once, or the # **Del** button twice.

- 3 Press the **Sel** button or the microphone **PTT** button to automatically dial the displayed number.

**Note:** If the number contains a programmed pause, the dialing pauses briefly when P is displayed. After the brief pause, the rest of the numbers are dialed.

- 4 When your party answers, press the **PTT** button to talk, and release it to listen.

**Note:** If you are out of range of the trunked system, NO PHONE is displayed, and a continuous low-pitched tone sounds. Press the **HOME** or **Phon** button to resume normal operation.

If the trunked phone interconnect is in use or the phone interconnect is out of service, a telephone-type busy tone sounds, and the display shows PHON BSY (W7) or PHONE BUSY (W9). Your number is automatically dialed when the phone interconnect becomes available. If you hang up, you lose your place in the queue.

If PHON BSY (W7) or PHONE BUSY (W9) is displayed with a low-pitched tone rather than a telephone-type busy tone, the call is not queued. You must hang up and try again.

If your radio is programmed for *live over dial*, every digit pressed after the phone call is established is sent to the telephone system.


If your radio is programmed for *buffered over dial*, the digits pressed are entered into the radio's memory, and they are all sent together when the **PTT** button is next pressed. You cannot send digits and talk on the same **PTT** button press. If you press the **PTT** button to send the digits, you must release the **PTT** button and press it again to transmit.

- 5 When the call is completed, press the **HOME** or **Phon** button to hang up and return to normal operation.

## Store a Number in the List

- 1 Press and hold the **Phon** button to select the phone programming function.

The phone indicator flashes (W7 only).

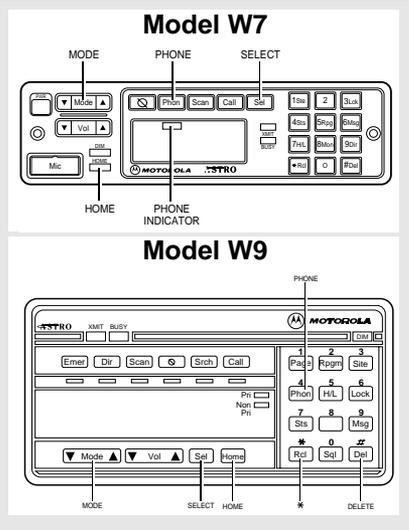

- 2 Do one of the following:

- Press the **Mode** rocker switch to locate the number you want to change.

**OR**

- Use the keypad to move directly to the phone number you want to change.

- 3 Press the **Sel** button to edit the displayed number.

- 4 Enter the new phone number on the keypad.

**Note:** To backspace, press the **#** button twice or the **Mode** down ▼ button once. Enter a pause by pressing the \* button, then the **#** button.

5 Press the **Sel** button to store the new number.

6 Do one of the following:

- Press the **HOME** button to return to normal radio operation.


**OR**

- Press the **Phon** button to return to normal phone operation.

## Edit a Name in the List (Models W7 and W9 Only)

1 Press and hold the **Phon** button to enter **Phon ID** list programming.

The **Phon** indicator flashes and a high-pitched tone sounds.

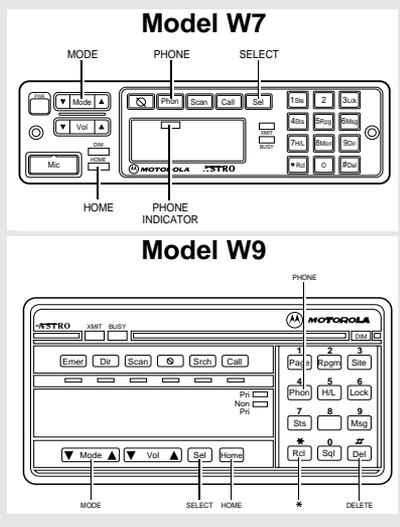

2 Press the **Mode** rocker switch to locate the list member you want to change.

- 3** Change the characters or numbers using any of the numeric keys (**0** through **9**) and special function keys (**\***, **#**).

**Note:** The maximum number of characters permitted in a text line is **8** for Model W7 and **11** for Model W9. If you try to add too many characters, you will hear a low-pitched tone.

To edit, do any or all of the following:

- To enter a character at the blinking cursor, refer to the table on page 83.

Press the key of the desired character the number of times shown in the table. For example, to enter the character **C**, press the **2** key three times.

- To leave a space in the text, press the **Mode up ▲** rocker switch to move the blinking cursor to the next character position, and then enter the character.

- To delete characters, press the **Mode** down ▼ rocker switch to move backwards over existing characters.

When the last character on the display has been erased, press the **Mode** down ▼ rocker switch again to leave the name-edit mode, without making any changes, and begin the procedure again at step 2.

- 4 To save the changes, press and hold the **Sel** button.

- 5 Repeat steps 2 through 4 until you have modified all the desired names,

**OR**

Do one of the following:

- Press the **HOME** button to return to normal radio operation.

**OR**

- Press the **Phon** button to return to normal phone operation.

**Table 1: Entering Characters Using the Keypad**

Key	Number of times the key is pressed								
	1	2	3	4	5	6	7	8	9
0	0	( )	<	>					
1	1	&	%						
2	A	B	C	2	a	b	c		
3	D	E	F	3	d	e	f		
4	G	H	I	4	g	h	i		
5	J	K	L	5	j	k	l		
6	M	N	O	6	m	n	o		
7	P	Q	R	S	7	p	q	r	s
8	T	U	V	8	t	u	v		
9	W	X	Y	Z	9	w	x	y	z
*	*	/	+	-	=				
#	#	.	!	?	,	;			

## Enhanced Private Conversation (Digital Modes Only)

The enhanced Private Conversation feature not only allows you to carry on a conversation that is heard only by the two parties involved, but also enables you to determine whether the unit you are calling is in service.

All models are capable of responding to a Private Conversation call initiated by another radio. The following further describes each model's capability:

- **All Models:** Feature a unique list of preprogrammed ID numbers. A name may be assigned to each ID in the list for your convenience.
- **Models W7 and W9:** In addition to a list of IDs, these models feature unlimited enhanced Private Conversation capability using a full, 12-button keypad to call any ID in the system.


### Answer an Enhanced Private Conversation Call

When a Private Conversation call is received, two high-pitched tones sound and the display alternates between **CALL RCV** and the home display.


- 1 Press the **Call** button within 20 seconds of receiving the call. (This time is programmable by a qualified radio technician.)

The display shows the ID number of the calling unit.


### Model W4

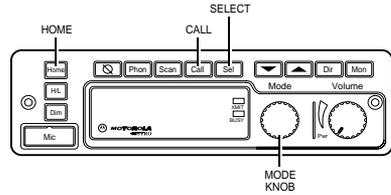


### Model W5

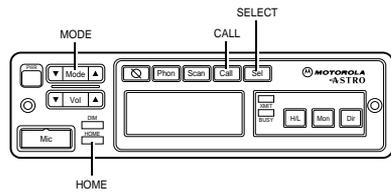

### Model W7

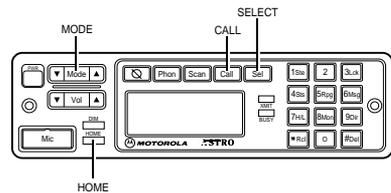

### Model W9

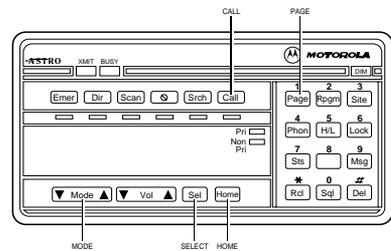

- 2** To respond to the call, press the **PTT** button and talk.

If 20 seconds pass before you press the **Call** button, you will not respond privately to the call just received. Instead, when you press **Call**, you enter the *Private Conversation Call* state, as described in “Initiate an Enhanced Private Conversation Call” on page 87.

If the system is busy when you attempt to answer the call, a telephone-type busy tone sounds and your radio’s **BUSY** indicator lights. When a channel becomes available, you receive a call back, and your radio automatically keys up for three seconds so that you can begin talking.





**Note:** If you do not press the **Call** button before pressing the PTT button, your conversation will be heard by all members of the talk group.

## Initiate an Enhanced Private Conversation Call

To initiate an Enhanced Private Conversation Call, select a unit to call, then place the call.

- 1 Press the **Call** button.

The **Call** indicator lights, and the display shows the last transmitted/received unit ID number.

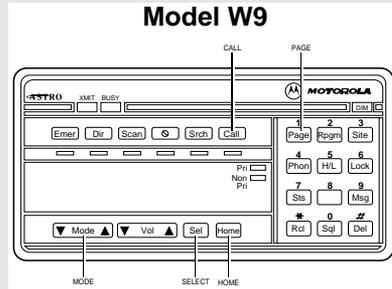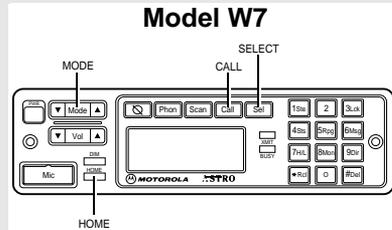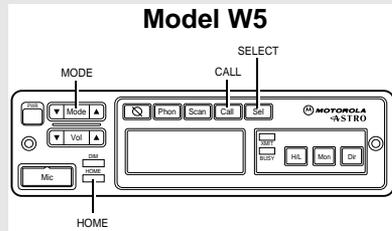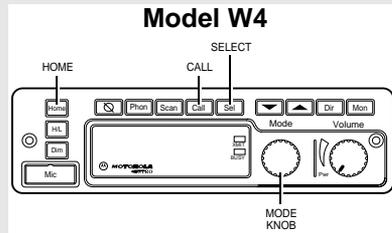

2 Select a unit in one of the following ways:

- **From the ID number list:**

- Do nothing if you want to call the presently displayed unit ID.

**OR**

- Use the prestored list by turning the **Mode** knob (W4) or by pressing the **Mode** rocker switch (W5, W7, W9) to locate the name/ID you want to call.


**OR**

- Press the **Mode** up ▲ rocker switch once, and then use the keypad to directly advance to the desired list member.


**OR**

- Enter, using the keypad, the ID of the desired unit.


### Model W4

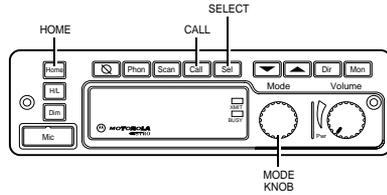


### Model W5

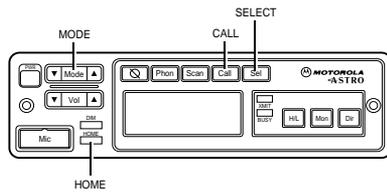

### Model W7

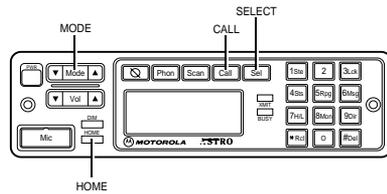


### Model W9

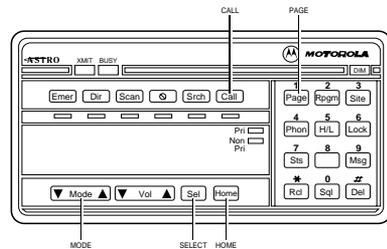

**Note:** Using the keypad to enter the ID of another unit can only be accomplished from the first display shown when **CALL** was entered. If the list has been entered, scroll to the first display.

- 3** Press the **Sel** button or the microphone **PTT** button.

A telephone-type ringing sounds if the unit you are calling is in service. The display shows **PLS WAIT** (W4, W5, W7) or **PLEASE WAIT** (W9).

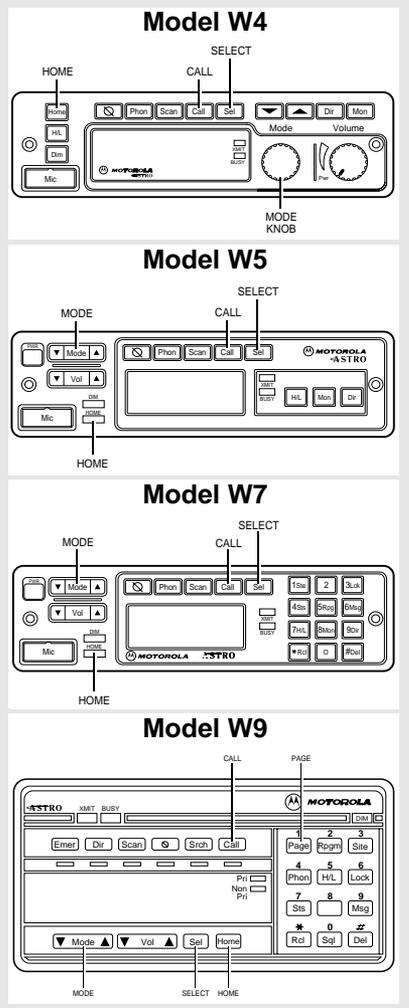

**4** Choose one of the following conditions that applies to your current call:

- If the receiving unit answers, identify yourself and begin your Private Conversation.
- If, after a programmable time period, you are not connected, the display shows **NO ACK** and a momentary, low-pitched tone sounds.

Try again, or press the **HOME** or **Call** button to return to normal operation.

- If you are out of the system's range, a low-pitched tone sounds.

Try again, or press the **HOME** or **Call** button to return to normal operation.

- If the system is busy when you attempt to make a call, the radio you are calling hears a telephone-type busy tone. When a channel becomes available, the called radio receives a call back and automatically keys up for three seconds so that conversation can begin.


**5** To return to normal operation, press the **HOME** or **Call** button.

**Note:** If you do not press the **HOME** or **Call** button to hang up, your unit will remain in the Private Conversation state with the other unit. You will miss all subfleet traffic and incoming phone calls.

## View Your Unit ID Number

- 1 Press the **Call** button momentarily to select the Private Conversation feature.

The **Call** indicator lights.

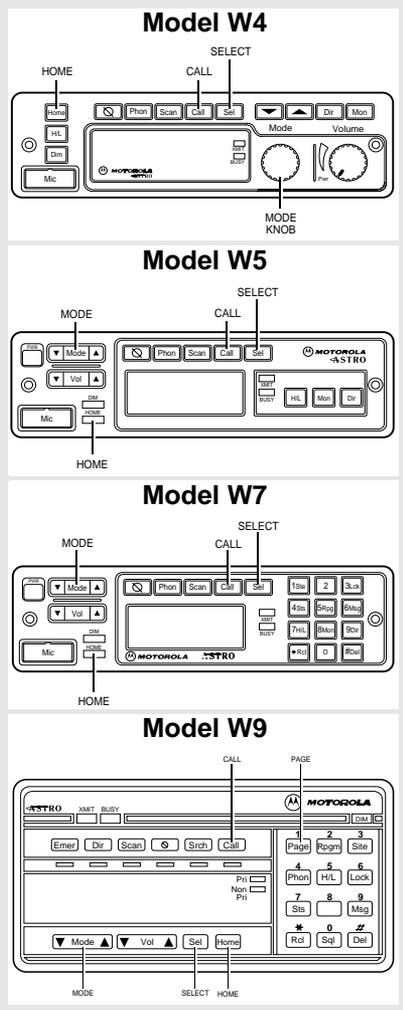

**2** Do one of the following:

- Turn the **Mode** knob (W4) counterclockwise or press the **Mode** down ▼ rocker switch (W5, W7, W9) to locate the MY ID display.

**OR**

- **Models W7 and W9 only:**  
When not in the scratchpad, press the \* button.

The display will alternate between MY ID and your ID number.


- 3** To return to normal operation, press the **HOME** or **Call** button.

## Store a Unit ID Number in the List (Models W7 and W9 Only)

The Private Conversation and Call Alert page features share the same prestored list of units' IDs.

- 1 Press and hold the **Call**, **Page**, or **2Pge** button to review the **Call ID** list.

The **Call** indicator flashes and a high-pitched tone sounds.

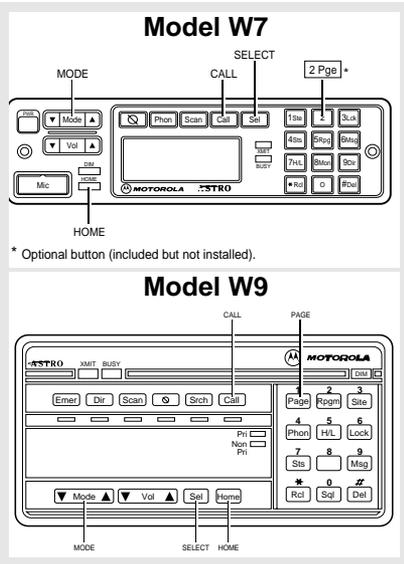

\* Optional button (included but not installed).

- 2 Press the **Mode** rocker switch to locate the list member you want to change.
- 3 Press the **Sel** button to select the unit ID store function.
- 4 Enter the new unit ID number on the keypad.

**Note:** If you make an error, press the **Mode** down ▼ rocker switch or **#Del** to erase each incorrect digit.

- 5 When all the digits of the ID are entered, press **Sel** to store the new ID.

- 6** Repeat steps 2 through 5 until all the desired IDs have been entered.

**OR**

Do one of the following:

- Press the **HOME** button to return to normal radio operation.

**OR**


- Press the **Call** button to return to normal Call operation.
-

## Edit a Name in the List (W7 and W9 Models Only)

The Private Conversation and Call Alert page features share the same prestored list of unit IDs.

- 1 Press and hold the **Call**, **Page**, or **2Pge** button to enter the **Call** ID list.

The **Call** indicator flashes and a high-pitched tone sounds.

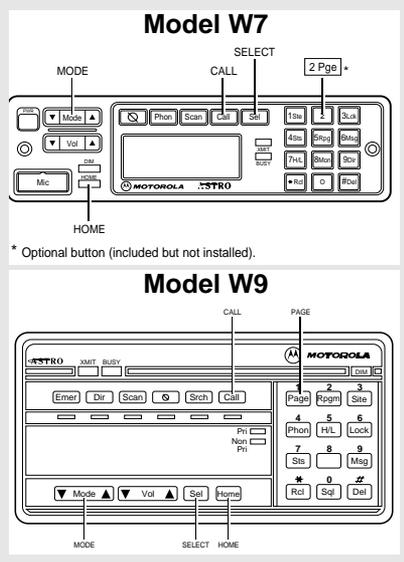

- 2 Press the **Mode** rocker switch to locate the list member you want to change.
- 3 Press and hold the **Sel** button to select the name-editing function.
- 4 Change the characters or numbers using any of the numeric keys (**0** through **9**) and special function keys (**\***, **#**).

**Note:** The maximum number of characters permitted in a text line is **8** for Model W7 and **11** for Model W9. If you try to add too many characters, you will hear a low-pitched tone.

To edit, do any or all of the following:

- To enter a character at the blinking cursor, refer to the table on page 98.

Press the key of the desired character the number of times shown in the table. For example, to enter the character **C**, press the **2** key three times.

- To leave a space in the text, press the **Mode up ▲** rocker switch to move the blinking cursor to the next character position, and then enter the next character.
- To delete characters, press the **Mode down ▼** rocker switch to move backwards over existing characters.

When the last character on the display has been erased, press the **Mode down ▼** rocker switch again to leave the name-edit mode, without making any changes, and begin the procedure again at step 2.

- 5** To save the changes, press and hold the **Sel** button.

- 6 Repeat steps 2 through 6 until you have modified all the desired names.

**OR**

Do one of the following:

- Press the **HOME** button to return to normal radio operation.

**OR**

- Press the **Call** button to return to normal Call operation.

**Table 2: Entering Characters Using the Keypad**

Key	Number of times the key is pressed								
	1	2	3	4	5	6	7	8	9
0	0	(	)	<	>				
1	1	&	%						
2	A	B	C	2	a	b	c		
3	D	E	F	3	d	e	f		
4	G	H	I	4	g	h	i		
5	J	K	L	5	j	k	l		
6	M	N	O	6	m	n	o		
7	P	Q	R	S	7	p	q	r	s
8	T	U	V	8	t	u	v		
9	W	X	Y	Z	9	w	x	y	z
*	*	/	+	-	=				
#	#	.	!	?	,	;			

---

## Call Alert Page (Digital Modes Only)

The Call Alert feature allows a unit to selectively alert another unit, and to determine whether or not that unit received the alert. A Call Alert page can be initiated after an unsuccessful Private Conversation call or as a separate feature.

All models are capable of responding to a Call Alert initiated by another radio. The following further describes each model's capability:




- **All Models:** Feature a unique list of up to 19 preprogrammed ID numbers. A name can be assigned to each ID in the list for your convenience.
- **Models W7 and W9:** In addition to a list of 19 IDs, these models feature unlimited Call Alert page capability using a full, 12-button keypad.

## Send a Call Alert Page


- 1 Press the **Page** button.

The **Page** indicator lights and a valid-key chirp sounds.

The display shows the last transmitted/received unit ID number.

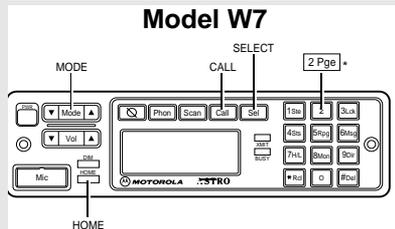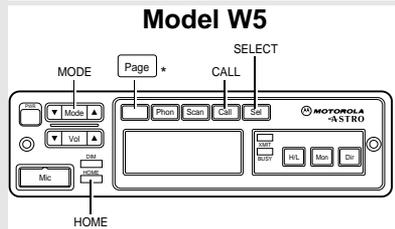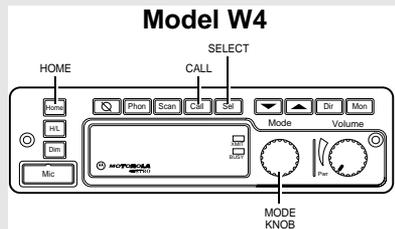

\* Optional button (included but not installed).

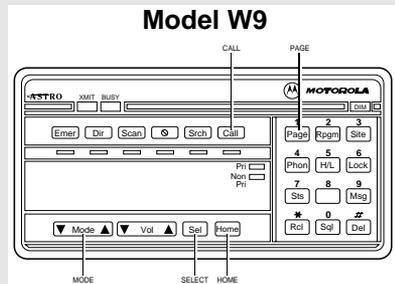

2 Select a unit in one of the following ways:

- **From the ID number list:**

- Do nothing if you want to call the presently displayed unit ID.

**OR**

- Use the prestored list by turning the **Mode** knob (W4) or by pressing the **Mode** rocker switch (W5, W7, W9) to locate the name/ID you want to call.

**OR**

- Press the **Mode** up ▲ rocker switch once, and then use the keypad to directly advance to the desired list member.




**OR**

- Enter, using the keypad, the ID of the desired unit.


**Note:** Using the keypad to enter the ID of another unit can only be accomplished from the first display shown when **Page** was entered. If the list has been entered, scroll to the first display.

- 3 Press the **Sel** button or the microphone **PTT** button.

The display changes to PLS WAIT (W4, W5, W7) or PLEASE WAIT (W9).

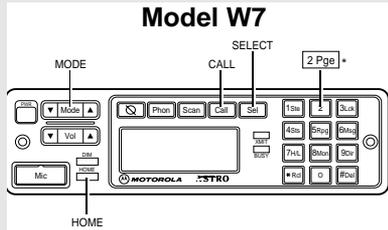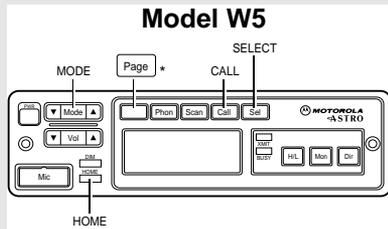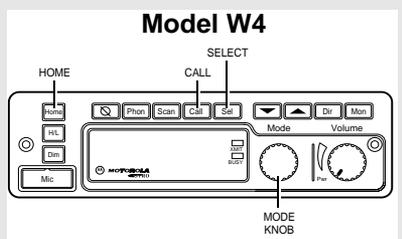

\* Optional button (included but not installed).

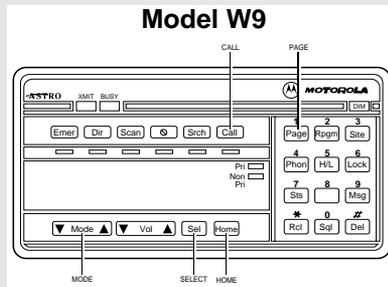

4 Choose one of the following:

- When the called unit acknowledges the page, four additional tones sound and the display changes to `ACK RCVD.`

The radio returns to normal operation.

- If you are out of the range of the system, a low-pitched tone sounds.

Try again by pressing the **PTT** button or **Sel** button,

**OR**

Press the **HOME** or **Page** button to return to normal operation.

- If, after six seconds, the called unit fails to acknowledge the alert, a low-pitched tone sounds and the display changes to `NO ACK.`

Try again by pressing the **PTT** button or **Sel** button,

**OR**

Press the **HOME** button or **Page** button to exit.

---

## Answer a Call Alert Page

If you are not available when a caller sends you a Call Alert page, a `PAGE RCV` message and the caller's ID are left.

If the page also triggers an external alarm, the display shows `PAGE RCV` and four tones repeat every five seconds.

- 1 Do one of the following:
  - Make a normal dispatch call. Press the **PTT** button and ask about the page.

**OR**

- Press **Call**. The display shows the unit ID of the caller.

Press the **Sel** button to initiate an enhanced Private Conversation or the **PTT** button to initiate a Private Conversation call to the caller.

**Note:** Pressing any button, the **PTT** button, changing systems, or pressing **Call** or **Page** clears the `PAGE RCV` display. The original unit ID is retained until another Call Alert or Private Conversation call is received.


---

## Store a Unit ID Number In the List (Models W7 and W9 Only)


The Private Conversation and Call Alert page features share the same prestored list of unit IDs.

- 1 Press and hold the **Page** button to review the list.

The **Page** indicator flashes and a valid-key chirp sounds.

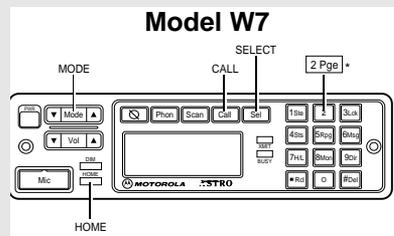

\* Optional button (included but not installed).

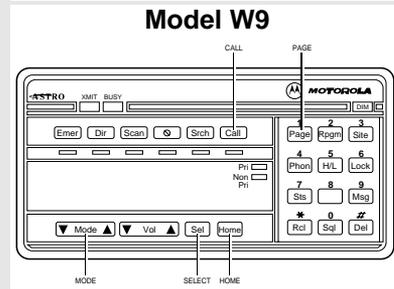

- 2 Press the **Mode** rocker switch to locate the list member you want to change.

- 3 Press the **Sel** button to select the unit ID store function.

- 4 Enter the new unit ID number on the keypad.

**Note:** If you make an error, press the **Mode** down ▼ rocker switch or the **#Del** button to erase each incorrect digit.

- 5 Press the **Sel** button to store the new ID.

- 6** Repeat steps 2 through 5 until all the desired IDs have been entered.

**OR**

Do one of the following:

- Press the **HOME** button to return to normal radio operation.

**OR**


- Press the **Page** button to return to normal Call Alert operation.
-

## Edit a Name in the List (Models W7 and W9 Only)

The Private Conversation and Call Alert page features share the same prestored list of unit IDs.

- 1 Press and hold the **Call**, **Page**, or **2Pge** button to enter **Call ID** list programming.

The **Call** indicator flashes and a high-pitched tone sounds.

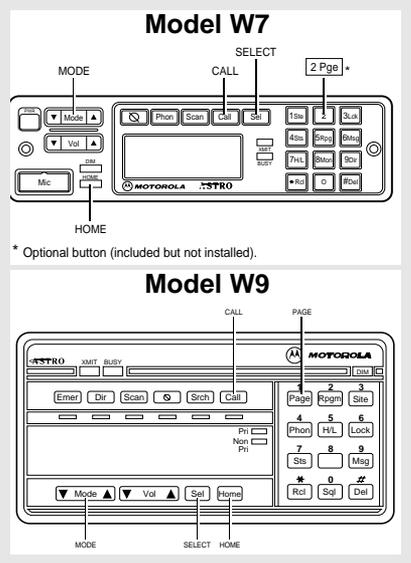

- 2 Press the **Mode** rocker switch to locate the list member you want to change.
- 3 Press and hold the **Sel** button to select the name-editing function.
- 4 Change the characters or numbers using any of the numeric keys (**0** through **9**) and special function keys (**\***, **#**).

**Note:** The maximum number of characters permitted in a text line is **8** for Model W7 and **11** for Model W9. If you try to add too many characters, you will hear a low-pitched tone.

To edit, do any or all of the following:

- To enter a character at the blinking cursor, refer to the table on page 109.

Press the key of the desired character the number of times shown in the table. For example, to enter the character **C**, press the **2** key three times.

- To leave a space in the text, press the **Mode** up ▲ rocker switch to move the blinking cursor to the next character position, and then enter the next character.
- To delete characters, press the **Mode** down ▼ rocker switch to move backwards over existing characters.

When the last character on the display has been erased, press the **Mode** down ▼ rocker switch again to leave the name-edit mode, without making any changes, and begin the procedure again at step 2.

- 5** To save the changes, press and hold the **Sel** button.

- 6 Repeat steps 2 through 5 until you have modified all the desired names,

**OR**

Do one of the following:

- Press the **HOME** button to return to normal radio operation.

**OR**

- Press the **Page** button to return to normal Call Alert operation.

**Table 3: Entering Characters Using the Keypad**

Key	Number of times the key is pressed								
	1	2	3	4	5	6	7	8	9
0	0	(	)	<	>				
1	1	&	%						
2	A	B	C	2	a	b	c		
3	D	E	F	3	d	e	f		
4	G	H	I	4	g	h	i		
5	J	K	L	5	j	k	l		
6	M	N	O	6	m	n	o		
7	P	Q	R	S	7	p	q	r	s
8	T	U	V	8	t	u	v		
9	W	X	Y	Z	9	w	x	y	z
*	*	/	+	-	=				
#	#	.	!	?	,	;			

## Failsoft

If the trunked system's central controller fails for any reason, the radio indicates *failsoft*. In this condition, the radio transmits and receives on a pre-determined frequency in a conventional mode.

Failsoft ensures that you will have communications capability at all times. Radios can be programmed by a qualified radio technician so that units that normally communicate on the same trunked mode will be assigned to the same failsoft repeater frequency.

Since the normal trunking features do not operate during failsoft, much of the privacy of trunked systems is lost. You must share the channel with other users until the failure is corrected.

To continue, in failsoft, to communicate with other talkgroups:

- 1 Rotate the **Mode** knob (W4) or press the **Mode** (W5, W7, W9) rocker switch to change to a different repeater frequency.

The failsoft condition is indicated by a faint beeping tone every ten seconds (radio unsquelched).

When the trunking system returns to normal operation, the beeping tone stops.

- 2 Press the **PTT** button to talk, and release the button to listen.

---

If a system that is in failsoft is accessed while in scan, the radio freezes scan and remains on the failsoft frequency for a period of six seconds. This time period can be changed by a qualified radio

technician. This time allows the operator to monitor the failsoft frequency for activity before resuming scanning.

On models W7 and W9, the nuisance-delete feature can be used to temporarily delete the system in failsoft from the scan list, if desired.

## Dynamic Regrouping (Digital Modes Only)

The dynamic regrouping feature allows the dispatcher to temporarily reassign selected individuals, operating in separate trunked talkgroups, into a single group so that they can communicate.

### Receive a Dynamic Regrouping ID Assignment (Models W7 and W9 Only)

When your unit receives a dynamic regrouping ID assignment, a unique chirp sounds to alert you that your unit has been dynamically regrouped. The display shows the new dynamic mode name assignment. Examples of the field-programmable dynamic mode names include 16 DYNMC, 8 TACTCL.

Press the **PTT** button. The radio makes a chirp and transmits on the dynamically assigned mode.

After the dispatcher releases your mobile from the dynamic ID assignment, your radio returns to the last selected, non-dynamic regrouping mode.

If no dynamic regrouping assignment has been made, a low-pitched tone sounds if you attempt to select a dynamic mode.

---

## Select Enable and Disable (Digital Modes Only)

The dispatcher may classify regrouped units into one of two categories: *select-enabled* or *select-disabled*.

**Select-enabled** Units are free to make mode changes to any of the available talkgroups, including the dynamic group.


**Select-disabled** Units cannot change modes because the dispatcher has specifically chosen to force the unit to remain in the dynamic mode.

## Request a Dynamic Regrouping (Models W7 and W9 Only) (Digital Modes Only)

- 1 Press the **Rpg** (W7) or **Rpgm** (W9) button to request regrouping.

A high-pitched tone sounds, indicating your request was received by the system's central controller.

The display changes to **RPGM** (W7) or **RPGM ROST** (W9) while the request is being processed.

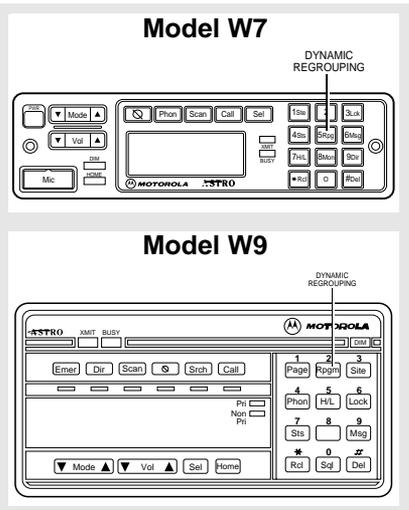

If the regrouping request is **acknowledged**, a dispatcher-acknowledge signal sounds (four high-pitched tones), and the display shows `ACK RCVD`.

The radio then returns to normal operation.

If the regrouping request is **not acknowledged** within six to eight seconds, the display alternates between showing `NO ACK` and `RPGM` or (W9 Model) `RPGM RQST`, and a low-pitched tone sounds.

At this time, do one of the following:

- Press the microphone **PTT** button or the **Sel** button to resend the regroup request.

OR

- Press the **HOME** button to return to normal operation.

## SmartZone™ (Models W7 and W9 Only)

The SmartZone feature extends communications beyond the reach of a single-trunked site (antenna location) when operating in a SmartZone system. SmartZone units provide expanded wide-area coverage.

SmartZone automatically switches the radio to a different site when the current site signal becomes unacceptable. This usually happens when the vehicle in which the radio is located is driven out of the range of one site, and into the range of another.

Under normal conditions, a SmartZone-enabled radio functions invisibly to the operator. However, the operator does have some manual controls on the W7 and W9 models: the **Site** and **Lock** buttons. These buttons can be used to check, or change, the SmartZone operation.

## Site-Button Operation

To check which site the radio has currently selected:


Press the **Ste** (W7) or **Site** (W9) button momentarily.

The current site name and RSSI (received signal strength indicator) are displayed momentarily.

One of the following conditions can also occur:

- If the radio is not locked onto a site, but is scanning for a new site, **SCANNING** is displayed.
- If the radio has not yet received site ID information for the current site, the radio displays **SITE XX**.

**Note:** You can also initiate scanning to another site by holding down the **Ste** button until **SCANNING** is displayed.

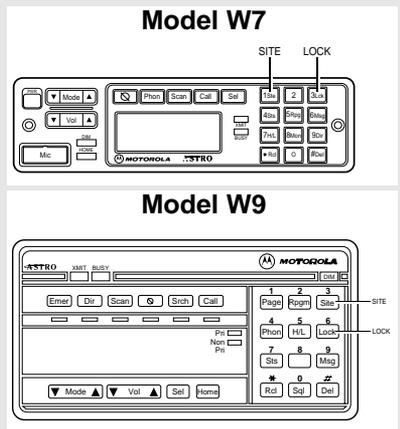


## Lock Onto a Site

In areas that commonly have weak signals, use the SmartZone lock function to prevent the radio from automatically scanning for a new site.

- 1 Press the **Lck (W7)** or **Lock (W9)** button momentarily to display the current lock status.

**Model W7:** Either **LOCKED** or **UNLOCKED** is displayed.

**Model W9:** Either **SITE LOCKED** or **SITE UNLCKD** is displayed.

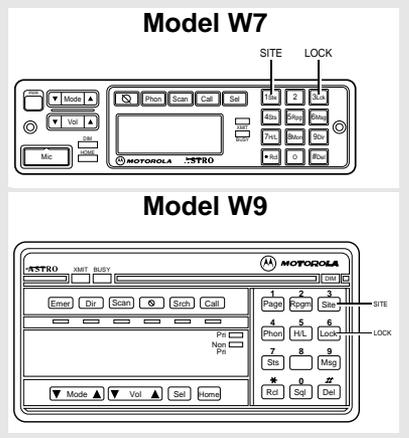

- 2 To change the locked or unlocked condition, press and hold the **Lck (W7)** or **Lock (W9)** button until a tone sounds and the display changes.

After temporarily displaying the new condition, the radio returns to normal operation.

## Site Trunking

In a SmartZone system, if the zone controller for a particular site fails, the site enters into a site-trunking operational mode. In this mode of operation, the user can only communicate with other units at the same site.

Radios in a SmartZone system can be programmed by a qualified radio technician to display `STE TRNK (W7)` or `STE TRUNK (W9)` when site trunking becomes active. The display alternates with the current mode display as long as the radio remains in site trunking. The radio also sounds a valid-key chirp when it first detects site trunking.

## Out-of-Range Indication

The out-of-range display/audible indication feature can be enabled by a qualified radio technician. `OUT OF RANGE` and the current selected mode are alternately displayed, and a low-pitched tone sounds every six seconds:

- When the radio is out of range of the system and can no longer lock onto the control channel

### **OR**

- When the radio is in failsoft and cannot lock onto the failsoft channel.

The out-of-range indication remains in effect until one of the following conditions occur:

- The radio locks on a control channel
- The radio locks on a failsoft channel
- The radio is turned off

## Trunked Announcement

The announcement capability allows a user to make announcements to the entire user group, as well as monitor talkgroup calls and other announcements.

Announcement calls are handled in two different ways, depending on the trunked central controller configuration. The two types are called *ruthless* and *non-ruthless* preemption.

- **Ruthless Preemption:** When a ruthless preemption announcement call is initiated, the requesting radio begins transmitting immediately. All associated talkgroup calls taking place on other channels are immediately halted, and the radios are steered to the announcement call.

Transmitting radios continue to transmit until the PTT button is released, at which time they also unmute for the announcement call. Individual calls (Private Conversation and telephone interconnect) are not affected.


- **Non-Ruthless Preemption:** When a non-ruthless preemption announcement is initiated, the initiating unit receives a telephone-type busy tone, followed by a call back when all associated talkgroup conversations end.

Once an announcement call is pending, any attempts by other users to initiate a talkgroup call will result in a telephone-type busy tone. These users will not receive a call back until the announcement call is complete.

## Initiate an Announcement

If your radio has been programmed to allow announcement calls:

- 1 Turn the **Mode** knob (W4) or press the **Mode** rocker switch (W5, W7, W9) to locate the announcement-group mode.

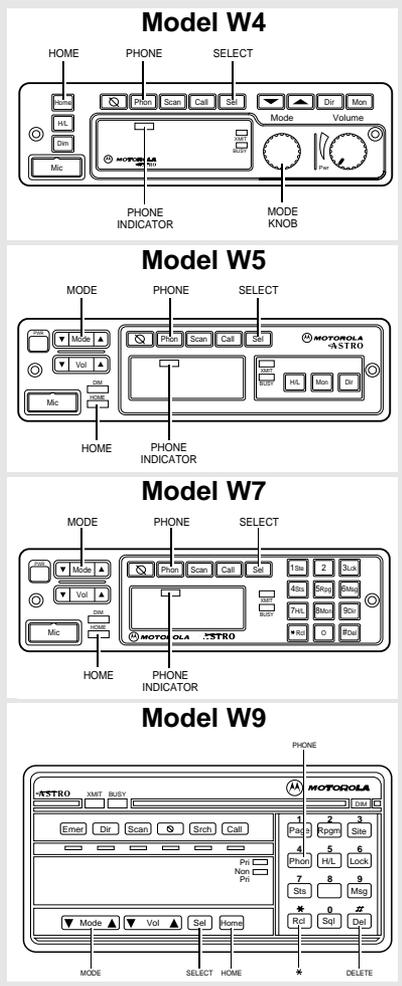


- 2 Press the microphone **PTT** button to initiate the announcement.

# Secure Operation

## Receive a Private Message

- 1 Select a mode by turning the **Mode** knob (W4) or pressing the **Mode** rocker switch (W5, W7, W9).

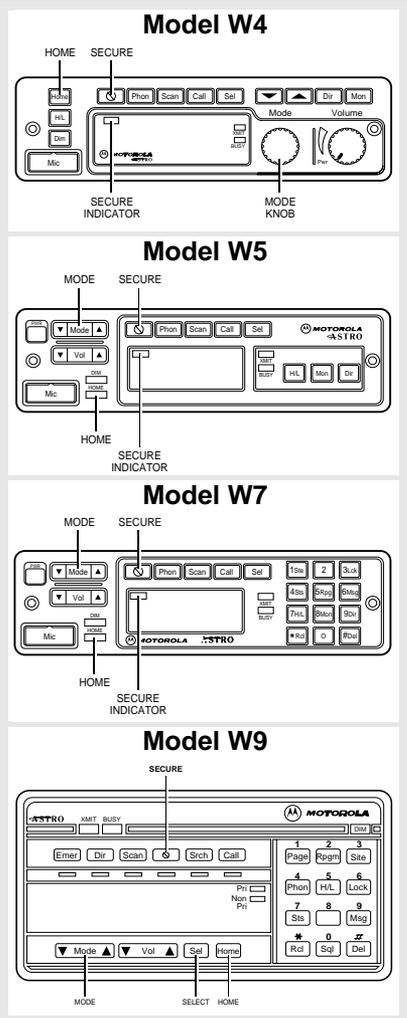

- 2 Using the **Volume** knob (W4) or the **Vol** rocker switch (W5, W7, W9), adjust the volume to a comfortable listening level.

In conventional modes and, if enabled, in trunking modes, the **BUSY** light blinks and the radio unmutes when the radio is receiving a private message.

**Note:** The secure on/off state does not affect received messages. The radio automatically receives coded or clear messages.

---

## Transmit a Private Message

- 1 Press the  button to turn on the coded mode.

Some radio modes may have secure automatically set on or off if the *mode-strapped Secure* feature is enabled.

The current key is displayed if *multi-key* has been enabled.

**Note:** If the coded mode is selected, the  is on. If the standard (clear) mode is selected, the  indicator is off.

- 2 Monitor the mode to be sure it is not in use.

- 3 Press and hold the **PTT** button to transmit.

The **XMIT** indicator lights, and the display shows the current key selected when transmitting in the coded mode, if multikey and *Display on PTT* are enabled.

## System Considerations

- **Trunked Systems only:** If you press the **PTT** button when no secure-voice channel is available, the display shows **NO SEC** (W4, W5, W7) or **NO SECURE** (W9), and a continuous talk-prohibit tone sounds until you release the **PTT** button.
- **Analog trunking systems:** You **are not allowed** to change from a secure transmission to a clear transmission during a secure trunked call. If you attempt to change from a secure to a clear

transmission during a call, the radio generates a talk-prohibit tone, and the display will show `SEC ONLY` or `SECURE ONLY`.

- **Digital trunking systems:** You **are allowed** to change from a secure transmission to a clear transmission during a secure trunked call.

## Loss Indication

When you press the PTT button while in the coded mode and without the encryption module containing a valid key, the speaker generates bursts of alert tones, and the display shows `KEY FAIL` until you release the PTT button.

When the radio is first turned on, six medium-pitched tones sound and the display momentarily shows `KEY FAIL` to indicate that the encryption module does not contain a valid key for the current mode.





If the periodic keyfail tone feature is enabled, six medium-pitched tones are generated every five to ten seconds while the radio is not transmitting or receiving to remind you that the radio does not have a valid key for the current mode. The keyfail reminder will not sound when the radio is in clear mode.

## Select an Encryption Key (Conventional Only)

The Select Key feature allows you to manually select any one of the 16 encryption keys.

If the current mode is programmed with key selection being strapped to force the current mode to use a predetermined key, the Select Key menu will not appear as a Secure menu item.

- 1 Press and hold down the  button until a tone sounds, which indicates entry into the Advanced Secure menu.

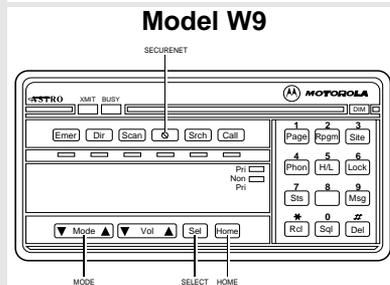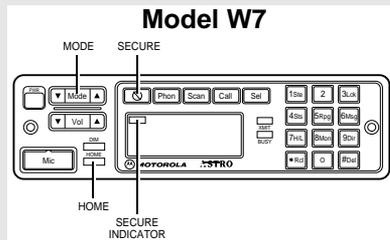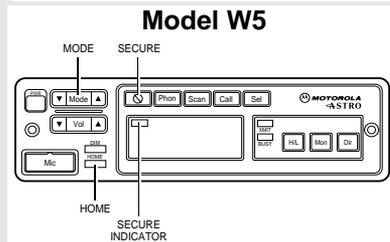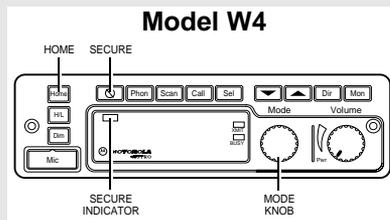

- 2 Turn the **Mode** knob (W4) or press the **Mode** rocker switch (W5, W7, W9) to locate the **KEY SEL** option.

- 3** Press the **Sel** button to enter the Key Selection menu.

The display changes to show the last user-selected key.

- 4** Do one of the following:

- Turn the **Mode** knob (W4) or press the **Mode** rocker switch (W5, W7, W9) to review the encryption keys,

**OR**

- Use direct keypad entry to access the encryption keys.

- 5** Choose one of the following:

- To save a key, press the **Sel** button.

The radio returns to the home display.

- To select the default encryption keys on a radio-wide basis, press the **Sel** button while the radio displays PRESET.

Selecting preset causes the radio to return to its preprogrammed keys on a per-zone/-mode basis.

**Note:** When you scroll to an erased key, the display alternates between the key name and ERASED.

- 6** To abort this menu, press the **HOME** button or the **PTT** button.

Pressing the **HOME** button exits the key-select menu without saving the selected key choice.

Pressing the **PTT** button exits the menu without saving the selected key choice and allows the radio to transmit.

When you abort the key-select menu, the radio uses the key that was selected prior to entry into the menu.


---

## Select an Encryption Index (Conventional Only)

The *Select an Index* feature allows you to select one or more groups of several encryption keys from among the available keys stored in the radio. For example, you could have a group of three keys structured to one index, and another group of three different keys structured to another index. By changing indices, you would automatically switch from one set of keys to the other.

If the mobile does not support indexing, the index menu will not appear as a Secure menu item.

- 1 Press and hold down the  button until a tone sounds, which indicates entry into the Advanced Secure menu.

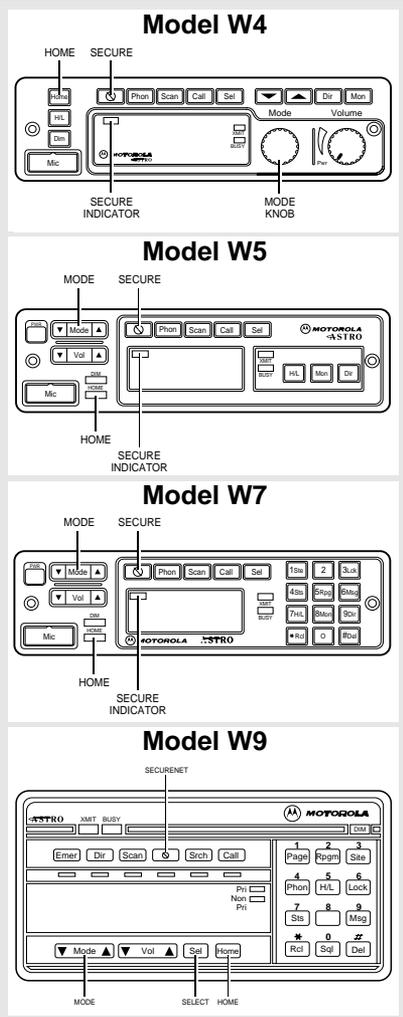

- 2 Turn the **Mode** knob (W4) or press the **Mode** rocker switch (W5, W7, W9) to locate the `INDX SEL` option.

- 3** Press the **Sel** button to enter the Index Selection menu.

The display changes to show the last index that was selected and stored after the Index Selection menu was entered.

- 4** Turn the **Mode** knob (W4) or press the **Mode** rocker switch (W5, W7, W9) to locate the desired key index.

- 5** Choose one of the following:

- To save an index key, press the **Sel** button. The radio will save the index and return to normal operation,
- To abort from the Index Selection menu, press the **HOME** button or the **PTT** button. (Pressing the PTT button allows the radio to transmit.)

## Troubleshooting

The following are suggestions to assist you in troubleshooting possible operating problems.



**Caution**

The cables that connect to the rear of the radio could have live voltage on some of their pins. Do not remove or reconnect these cables. Only a qualified radio technician should perform this task. Service performed by unauthorized personnel may cause the radio to transmit an emergency alarm even if the unit is turned off.

If your radio is locked up or the display shows FL 01/90 (W4, W5, W7) or FAIL 01/90 (W9), turn the radio off and then back on. If this does not correct the condition, take the radio to a qualified radio technician for service.

If radio operation is intermittent, check with other persons using the system for similar problems before taking the radio in for service. Similar problems indicate a system malfunction rather than a radio failure.

If symptoms persist or, if your unit exhibits other problems, contact a qualified radio technician.

# Glossary

---

<b>ACK</b>	<b>A</b> cknowledgment of communication.
<b>Channel</b>	A group of characteristics, such as transmit/receive frequency pairs, radio parameters, and encryption encoding.
<b>Coded Squelch</b>	Tone Private-Line™ or Digital Private-Line. Used on conventional channels to make sure you hear only the communication meant for you.
<b>Control Channel</b>	In a trunking system, one of the channels that is used to provide a continuous, two-way/data communications path between the central controller and all radios on the system.
<b>Conventional</b>	Typically refers to radio-to-radio communications, sometimes through a repeater. You share a frequency, or frequencies, with other users without the aid of a central controller to assign communication channels. Therefore, you should monitor each channel before transmitting to avoid interfering with another user who may be transmitting.
<b>Cursor</b>	A visual tracking marker (a blinking line) that indicates a location on the display.
<b>Digital Private-Line (DPL) Coded Squelch</b>	A continuous, sub-audible data signal, transmitted with the carrier.
<b>Dispatcher</b>	An individual who has radio system management duties.
<b>Failsoft</b>	A back-up system allowing you to communicate in a non-trunked, conventional mode should the trunked system fail.
<b>FCC</b>	<b>F</b> ederal <b>C</b> ommunications <b>C</b> ommission.

<b>Hang Up</b>	Disconnect.
<b>Home Display</b>	The first display information after the radio completes its self test.
<b>LCD</b>	<b>Liquid-Crystal Display.</b>
<b>Mode</b>	A programmed combination of operating parameters; for example, a channel or talkgroup.
<b>Mode-Slaving</b>	Radio programmed to automatically give the proper operation for a given mode you have selected.
<b>Monitoring (Conventional Operation)</b>	Press a programmed monitor button to listen to another user active on the channel. This way, you may be prevented from talking over someone else's conversation.
<b>Page</b>	A one-way alert, with audio and/or display messages.
<b>Push-To-Talk (PTT) Switch</b>	The <b>PTT</b> switch engages the transmitter and puts the radio in transmit (send) operation when pressed. Press this switch to transmit; release it to receive.
<b>Repeater</b>	A conventional radio feature, in which you talk through a receive/transmit facility (repeater) that re-transmits received signals in order to improve communications range and coverage.
<b>RF</b>	<b>Radio Frequency.</b> A part of the general frequency spectrum between the audio and infrared light regions (about 10 kHz to 10,000,000 MHz).
<b>RSSI</b>	<b>Received Signal Strength Indicator.</b>

<b>Squelch</b>	The muting of audio circuits when received signal levels fall below a pre-determined threshold. With carrier squelch, you hear all channel activity which exceeds the radio's preset squelch level.
<b>Standby</b>	An operating condition whereby the radio's speaker is muted but still continues to receive data.
<b>Talkgroup</b>	An organization (or group) of radio users who communicate with each other, using the same communication path.
<b>Tone Private-Line (PL) Coded Squelch</b>	A continuous sub-audible tone transmitted with the carrier.
<b>Trunking</b>	The automatic sharing of communications paths between a large number of users (see Conventional). Allows radio users to share a smaller number of frequencies because a repeater, or communications path, is assigned to a talkgroup for the length of a conversation.
<b>Zone</b>	A grouping of channels or talkgroups.

## Notes

# Commercial Warranty

## Limited Warranty

### MOTOROLA COMMUNICATION PRODUCTS

#### I. What This Warranty Covers And For How Long

MOTOROLA INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

ASTRO Digital Spectra and Digital Spectra Plus Units	One (1) Year
Product Accessories	One (1) Year

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

#### II. General Provisions

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED

## Commercial Warranty

WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

### **III. State Law Rights**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

### **IV. How To Get Warranty Service**

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company which sold you the Product, it can facilitate your obtaining warranty service. You can also call Motorola at 1-888-567-7347 US/Canada.

### **V. What This Warranty Does Not Cover**

Defects or damage resulting from use of the Product in other than its normal and customary manner.

- A. Defects or damage from misuse, accident, water, or neglect.
- B. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- C. Breakage or damage to antennas unless caused directly by defects in material workmanship.
- D. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal

warranty inspection and testing of the Product to verify any warranty claim.

- E. Product which has had the serial number removed or made illegible.
- F. Rechargeable batteries if:
  - any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- G. Freight costs to the repair depot.
- H. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- I. Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- J. Normal and customary wear and tear.

## **VI. Patent And Software Provisions**

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A. that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B. that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C. should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes noninfringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

## Commercial Warranty

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

### **VII. Governing Law**

This Warranty is governed by the laws of the State of Illinois, USA.

# Index

---

## Symbols

800 MHz frequencies ..... 1

## A

add scan list channel ..... 47

adjust

display brightness ..... 12

squelch level ..... 22

volume ..... 11

alarms

activate non-permanent ..... 54

activate permanent ..... 55

change selected ..... 56

horn and lights ..... 53

initiate

emergency ..... 26

emergency call and alarm ..... 29

silent emergency ..... 31

non-permanent horn and lights

activation ..... 54

non-rearmable external ..... 58

optional external ..... 53

permanent horn and lights

activation ..... 55

rearmable external ..... 59

receiving call when turned on .. 57

alert tones ..... 5

analog

mode ..... 2

trunking system

considerations ..... 123

answer

Call Alert page ..... 104

Enhanced Private Conversation

call ..... 84

phone call ..... 72

ASTRO mode ..... 2

automatic scanning ..... 33

autoscan ..... 33

## B

basic operation ..... 9

box, hang up (HUB) ..... 53

buffered overdial ..... 78

button

Call ..... 41

Del ..... 42

Dim ..... 58

H/L (horn and lights) ..... 55

Home ..... 39

Mon (monitor) ..... 36

Page ..... 41

Phon (phone) ..... 72

PTT ..... 40

scan ..... 34

Site ..... 116

Sql (squelch) ..... 36

Sts (status) ..... 61

Zone down ..... 48

Zone up ..... 48

## C

call

answer phone ..... 72

conventional talkgroup ..... 66

emergency ..... 25

Enhanced Private

Conversation ..... 87

initiate

emergency ..... 27

Enhanced Private

Conversation ..... 87

from phone list ..... 74

phone number not in list ..... 77

receiving when alarms turned

on ..... 57

Call Alert page

answering ..... 104

description ..... 99

placing ..... 102

selecting unit to call ..... 100

sending ..... 100

Call button ..... 41

calls, status ..... 61

change

mode .....14  
mode in current zone .....15  
mode not in current zone .....16  
mode priorities .....44  
selected alarms .....56  
zone .....14  
channels, conventional .....4  
considerations  
  analog trunking systems .....123  
  digital trunking systems .....124  
  trunked systems .....123  
control head  
  operation .....4  
  status display .....5  
conventional  
  channel .....4  
  mode .....18  
  scan list .....33  
  selecting talkgroup .....67  
  talkaround .....69  
  talkgroup calls .....66  
conventional mode, monitoring  
  activity .....21  
current zone  
  change mode .....15  
  select mode .....15

**D**

Del button .....42  
delete  
  nuisance mode .....42  
  scan list channel .....50  
Designated Transmit Talkback  
  Channel .....53  
digital trunking system  
  considerations .....124  
Dim (dimmer) button .....58  
direct-entry keyboard, send  
  status .....64  
display, brightness adjustment ....12  
dynamic regrouping  
  receiving an ID assignment ...112  
  requesting .....113

**E**

edit name in list ..... 80, 107  
embedded signaling ..... 1  
emergencies, special  
  considerations ..... 32  
emergency call  
  initiating .....27  
  trunking .....25  
emergency call and alarm  
  description .....25  
  initiating .....29  
encryption key  
  index selection .....127  
  selecting .....124  
Enhanced Private Conversation  
  answer a call .....84  
  description .....84  
  initiate call .....87  
  select unit to call .....87  
entering keypad characters  
  .....83, 98, 109  
external alarms .....53  
  activate non-permanent horn and  
  lights .....54  
  activate permanent horn and  
  lights .....55  
  non-rearmable .....58  
  rearmable .....59

**F**

failsoft .....110  
FLASHport technology .....2  
frequency ranges  
  800 MHz .....1  
  UHF .....1  
  VHF .....1

**G**

glossary .....131

**H**

H/L (horn and lights) button .....55

- 
- hang time .....34
- hang up box (HUB) .....53
- Home
- button .....39
  - mode, selecting .....17
- horn and lights alarms .....53
- HUB (hang up box) .....53
- I**
- identification, radio .....3
- identifying models
- Model W4 .....3
  - Model W5 .....3
  - Model W7 .....3
  - Model W9 .....3
- indicator
- N PRI (non-priority) .....35
  - Phone .....77
  - PRI (priority) .....35
  - scan .....34
- initiate
- emergency alarm .....26
  - emergency call and alarm .....29
  - Enhanced Private Conversation
    - call .....87
    - phone call from list .....74
    - silent emergency alarm .....31
    - trunked announcement .....120
- interconnect, unlimited telephone 77
- introduction to radios .....1
- K**
- key, encryption
- index selection .....127
  - selecting .....124
- keypad
- character selection
    - sequence .....83, 98, 109
    - entering characters ...83, 98, 109
- knob
- Mode .....3, 39
  - Volume .....3
- L**
- list
- edit name .....80
  - editing a name .....107
  - phone, place call .....74
  - scan .....33
  - store phone number .....79
  - storing unit ID number .....105
  - telephone interconnect .....71
- live over dial .....78
- lock on a site, SmartZone .....117
- loss indication, secure operation 124
- M**
- Mode
- knob .....3, 39
  - rocker switch .....39
- mode
- analog .....2
  - ASTRO .....2
  - changing .....15
  - changing outside current zone 16
  - Mode
    - knob .....39
    - rocker switch .....39  - priorities, changing .....44
  - selecting .....15
  - selecting Home .....17
  - selecting outside current zone 16
  - selection .....14
  - slaving .....4
  - transmitting (conventional) .....18
  - transmitting (trunked) .....18
  - trunked .....4
- Mon (monitor) button .....36
- monitoring
- conventional mode activity .....21
- N**
- N PRI (non-priority) indicator .....35
- non-priority scanning .....33
- non-rearmable external alarms .....58

## Index

---

- non-ruthless preemption .....119
- non-talkback scan .....41
- nuisance mode
  - deleting .....42
  - restoring .....43
- O**
- operation
  - basic .....9
  - control head .....4
  - scan .....33
  - secure .....121
  - SmartZone site-button .....116
  - trunking .....71
- operator-selectable scan .....33
- out-of-range indication .....118
- overdial
  - buffered .....78
  - live .....78
- P**
- Page button .....41
- Phon (phone) button .....72
- Phone indicator .....77
- phone numbers, preprogrammed 71
- place phone call from list .....74
- placing Call Alert page .....102
- power level selection .....20
- powering on radio .....9
- preemption
  - non-ruthless .....119
  - ruthless .....119
- preprogrammed phone numbers .71
- PRI (priority) indicator .....35
- priority scanning .....33
- private message
  - receive .....121
  - transmit .....123
- programming scan list .....46
- PTT button .....40
- PTT-ID (Push-to-Talk identification) .....60
- Push-to-Talk identification (PTT-ID) .....60
- R**
- radio identification .....3
- rearmable external alarms .....59
- receive
  - call with alarms turned on .....57
  - private message .....121
- requesting a dynamic regrouping .....113
- restore
  - mode priorities .....45
  - nuisance mode .....43
- rocker switch
  - Mode .....39
  - Vol (volume) .....58
- ruthless preemption .....119
- S**
- scan
  - autoscan .....33
  - button .....34
  - indicator .....34
  - non-priority .....33
  - non-talkback .....41
  - operation .....33
  - operator-selectable .....33
  - priority .....33
  - talkback .....40
  - transmit while on .....40
  - turning on .....34
- scan list
  - add a channel .....47
  - conventional .....33
  - delete a channel .....50
  - modes .....33
  - programming .....46
  - restore mode priorities .....45
  - talkgroup scan .....33
  - trunked priority .....33
  - viewing .....38
- secure operation .....121
- select

- 
- Call Alert page unit ..... 100
  - conventional talkgroup ..... 67
  - encryption key ..... 124
  - encryption key index ..... 127
  - Home mode ..... 17
  - mode ..... 14
  - mode in current zone ..... 15
  - mode not in current zone ..... 16
  - power level ..... 20
  - volume level ..... 11
  - zone ..... 14
  - selected-disabled units ..... 113
  - selected-enabled units ..... 113
  - send
    - Call Alert page ..... 100
    - status call ..... 61
  - Site button ..... 116
  - site trunking
    - SmartZone ..... 118
  - site-button operation,
    - SmartZone ..... 116
  - slaved programming ..... 4
  - slaving, mode ..... 4
  - smart PTT ..... 66
  - SmartZone
    - description ..... 115
    - lock on a site ..... 117
    - site trunking ..... 118
    - site-button operation ..... 116
  - Sql (squellch) button ..... 36
  - squelch, adjusting level ..... 22
  - status calls
    - description ..... 61
    - sending ..... 61
  - status display, control head ..... 5
  - store phone number in list ..... 79
  - Sts (status) button ..... 61
- T**
- talk direct (mobile-to-mobile) ..... 69
  - talkback scan ..... 40
  - talkgroup scan list ..... 33
  - telephone interconnect list ..... 71
  - time-out timer ..... 60
  - tones, alert ..... 5
  - transmit
    - conventional modes ..... 18
    - private message ..... 123
    - trunked modes ..... 18
    - with scan on ..... 40
  - transmitting ..... 18
  - troubleshooting ..... 130
  - trunked
    - announcement
      - capability ..... 119
      - initiate ..... 120
    - Call Alert page ..... 99
    - mode ..... 4, 18
    - priority scan list ..... 33
    - system considerations ..... 123
  - trunking
    - answer phone call ..... 72
    - emergency call ..... 25
    - Enhanced Private
      - Conversation ..... 84
      - failsoft ..... 110
    - initiating emergency call ..... 27
    - operation ..... 71
    - status calls ..... 61
    - telephone interconnect list ..... 71
    - unlimited telephone
      - interconnect ..... 77
  - turn on
    - radio ..... 9
    - scan ..... 34
- U**
- UHF frequencies ..... 1
  - unit ID number, store in list ..... 105
  - units
    - select-disabled ..... 113
    - select-enabled ..... 113
    - troubleshooting ..... 130
  - unlimited telephone interconnect 77

Index

---

**V**

VHF frequencies .....1  
viewing scan list .....38  
Vol (volume) rocker switch .....58  
Volume knob .....3  
volume, adjusting .....11

**Z**

Zone down button .....48  
zone selection .....14  
Zone up button .....48





Motorola, Inc.  
8000 West Sunrise Boulevard  
Ft. Lauderdale, FL 33322

MOTOROLA, the Stylized M Logo, ASTRO, Digital Spectra,  
and Digital Spectra Plus are registered in the U.S. Patent  
and Trademark Office. All other product or service names are  
the property of their respective owners.  
© Motorola, Inc. 2004.  
All rights reserved. Printed in U.S.A.



**6881090C62-C**